


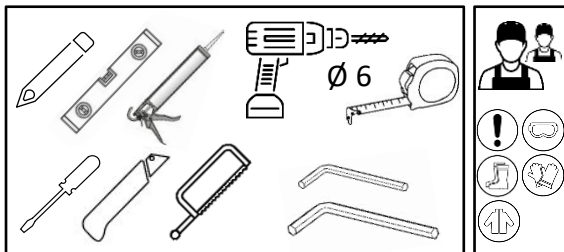

REBECCA BLACK


Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери


Shower door installation instructions





| | | | |
|-----|---|----------------------|---|
| 1. |  | MF-42/8-ER | 1 |
| 2. |  | 400211PS-013 | 1 |
| 3. |  | 40021PS-009 | 1 |
| 4. |  | 3,5x35 SK1SET; Ø 6 | 2 |
| 5. |  | PAL-01 | 1 |
| 6. |  | PAL-01B | 1 |
| 7. |  | SC-ALU8X9NEW | 1 |
| 8.R |  | SC-SL-UZL180R | 1 |
| 8.L |  | SC-SL-UZL180L | 1 |
| 9. |  | SU45CH + SK2SET1 | 1 |
| 10. |  | DR-CH32 | 1 |
| 11. |  | WGLA6801CP + SK3SET1 | 2 |
| 12. |  | 8 mm Safety Glass | 1 |
| 13. |  | 8 mm Safety Glass | 1 |

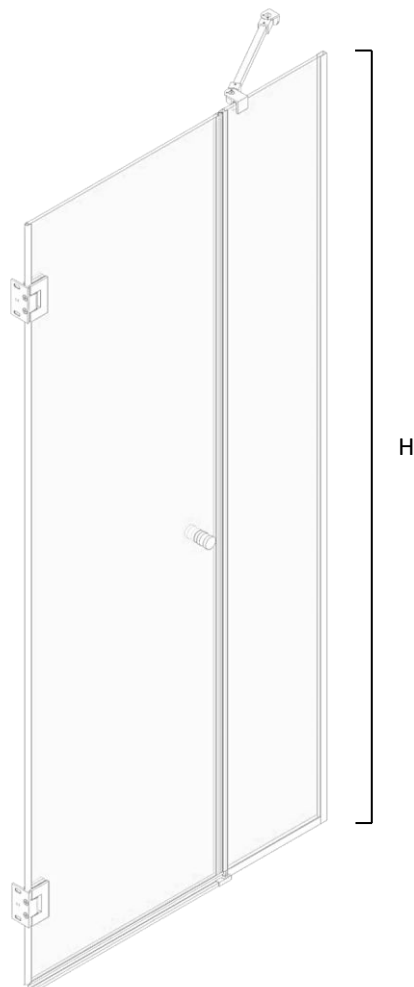

| REBECCA BLACK | A + B (mm) | B (mm) | H (mm) |
|---------------|------------|--------|--------|
| 70REB_B | 698-703 | 200 | 1988 |
| 80REB_B | 798-803 | 200 | 1988 |
| 90REB_B | 898-903 | 300 | 1988 |
| 100REB_B | 998-1003 | 300 | 1988 |
| 110REB_B | 1098-1103 | 400 | 1988 |
| 120REB_B | 1198-1203 | 500 | 1988 |

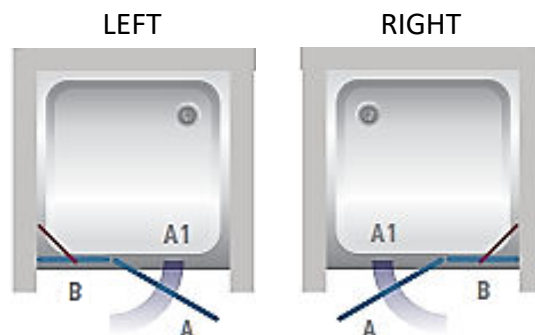

REBECCA BLACK

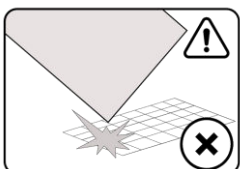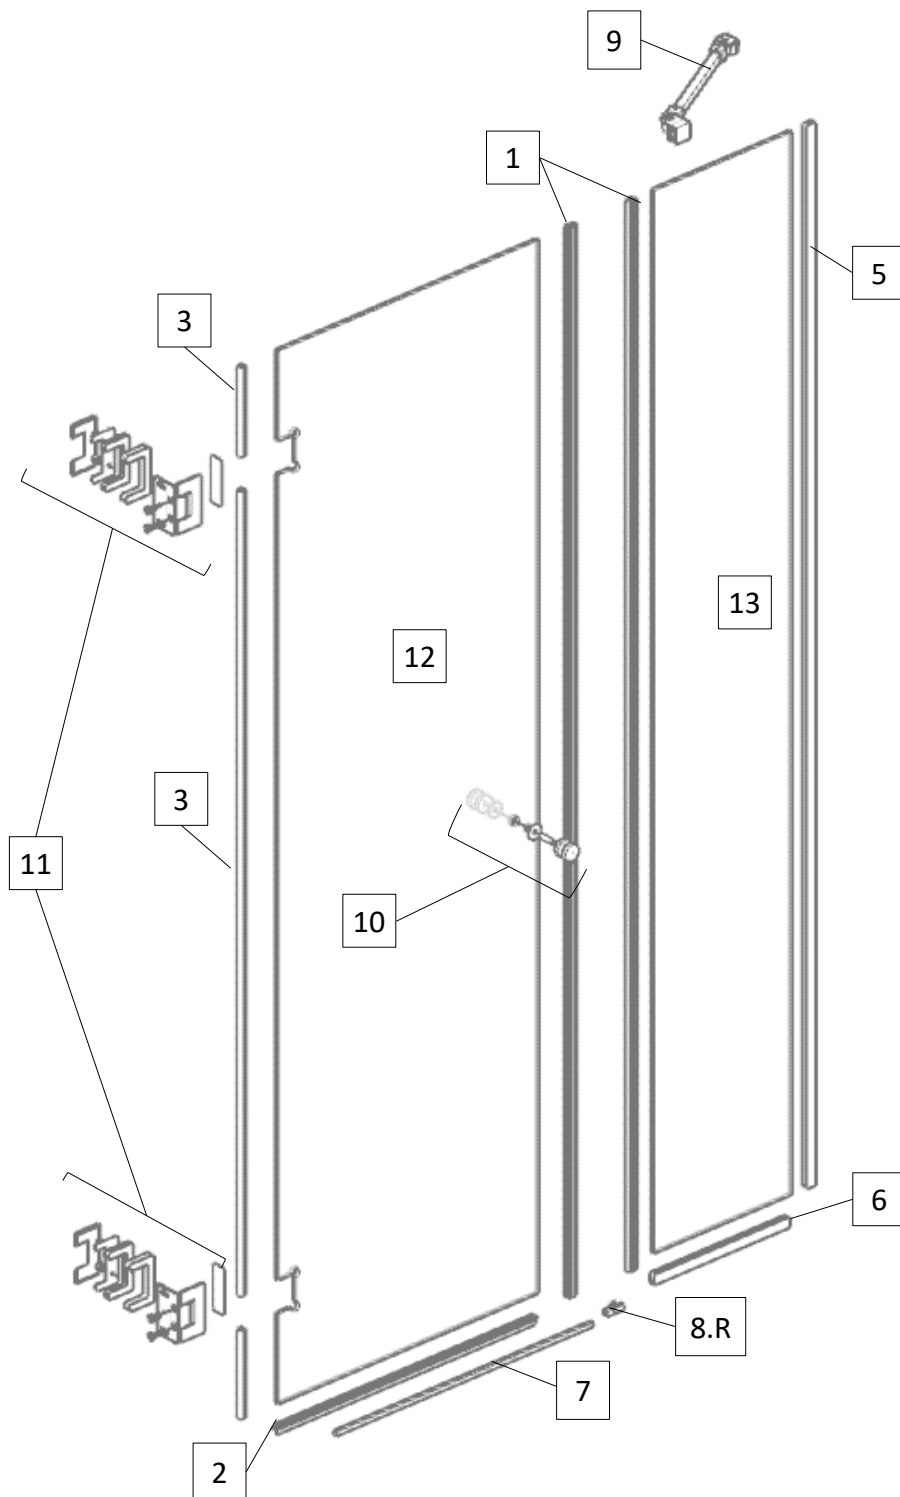

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

