


RONDO



Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions


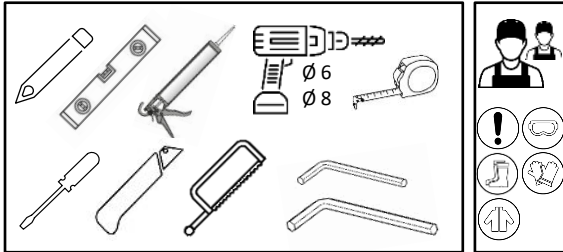


1.		PAL-01	1
2.		PAL-01B	1
3.		GC-2032/ MF-29-5MAGN	1
4.		8850KUO-8-2010	1
5.		SF67-8-SERE	2
6.		8864-KUO-8	1
7.		S008-PROF	1
8.		S008-RON-FUR	1
9.		SC-ALU8X9NEW	1
10.		R50CH-SER	1
11.		3,5X35 SK1SET	2
12.		8 mm Safety Glass	1
13.		8 mm Safety Glass	1

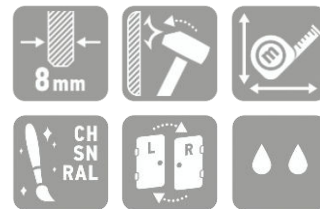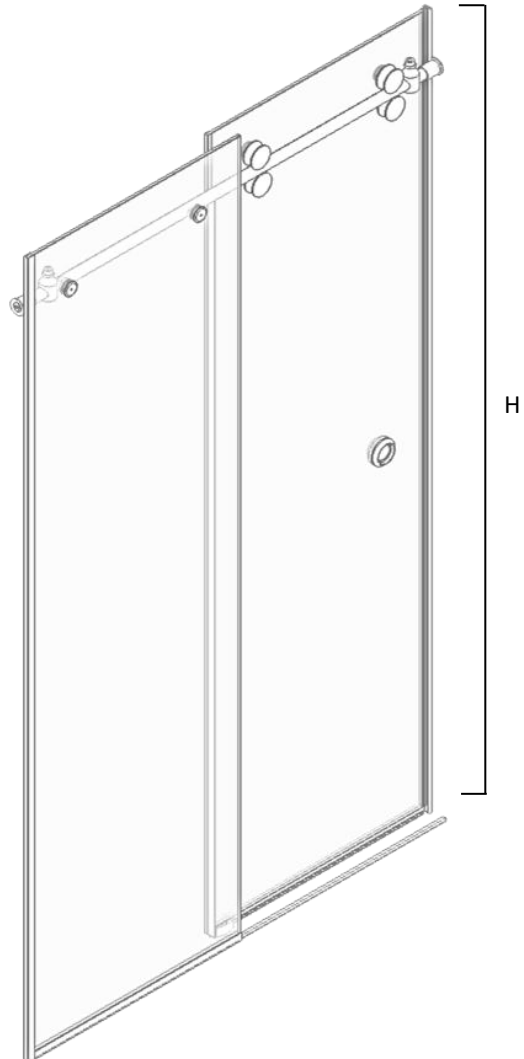


LEFT

RIGHT

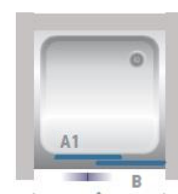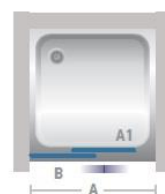

RONDO	A (mm)	B (mm)	H (mm)
100RON	980-1000	520	1988
110RON	1080-1100	570	1988
120RON	1180-1200	620	1988
130RON	1280-1300	670	1988
140RON	1380-1400	720	1988
150RON	1480-1500	770	1988

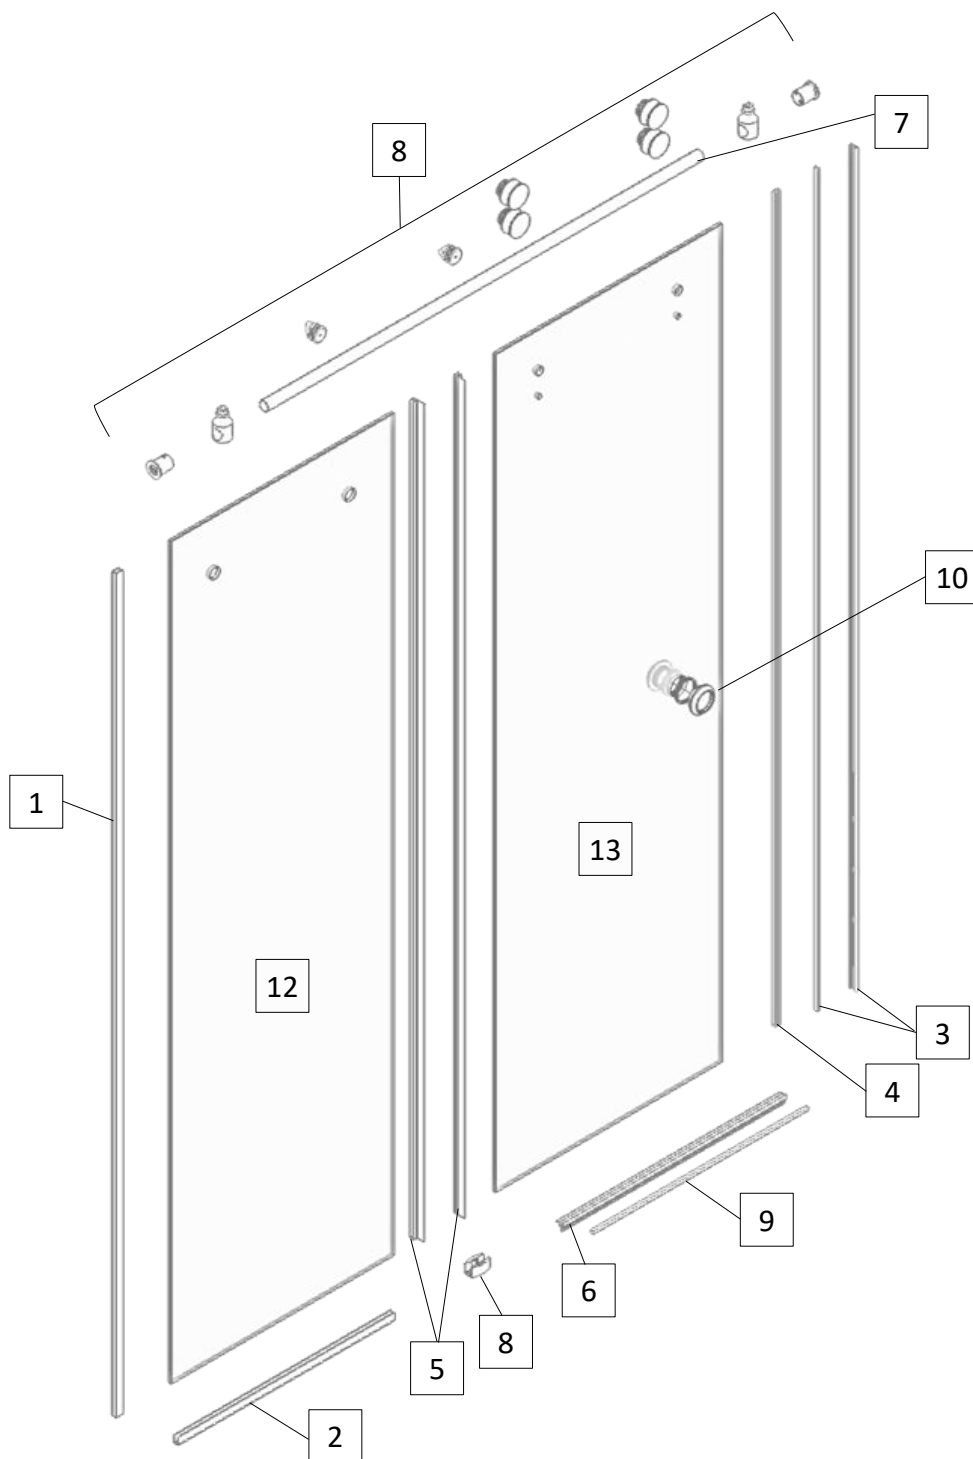

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

