










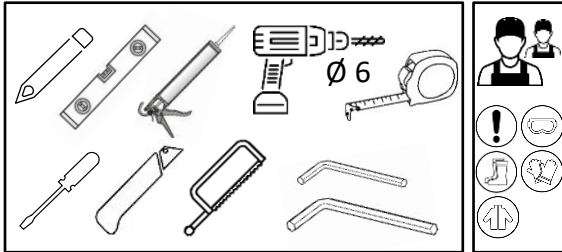



ROSSA LUX GOLD



Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions



1.		PAL-01	1
2.		PAL-01B	1
3.		GC-2032/ MF-29-5MAGN	1
4.		8850KUO-8-2010	1
5.		SF67-8-SERE	1
6.		8864-KUO-8	1
7.		S003-PROF	1
8.		S003_ROS_SET	1
9.		SC-ALU8X9NEW	1
10.		NLO-ZD-2856	1
11.		3,5X35 SK1SET	2
12.		8 mm Safety Glass	1
13.		8 mm Safety Glass	1

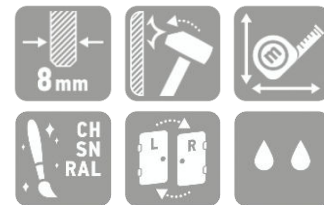
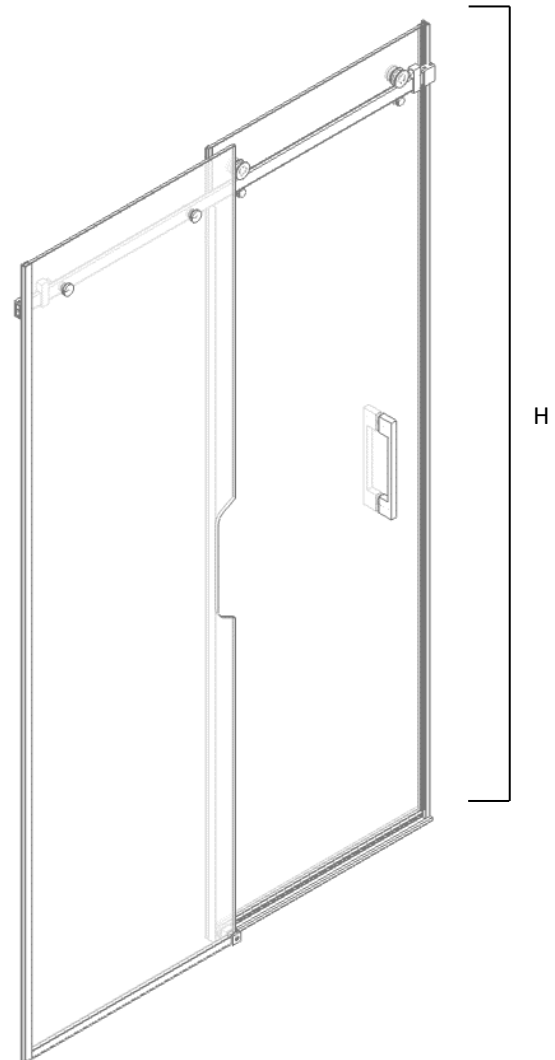


LEFT

RIGHT



ROSSA LUX GOLD	A (mm)	B (mm)	H (mm)
100ROS_G	980-1000	520	2000
110ROS_G	1080-1100	570	2000
120ROS_G	1180-1200	620	2000
130ROS_G	1280-1300	670	2000
140ROS_G	1380-1400	720	2000
150ROS_G	1480-1500	770	2000

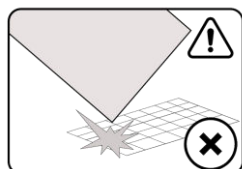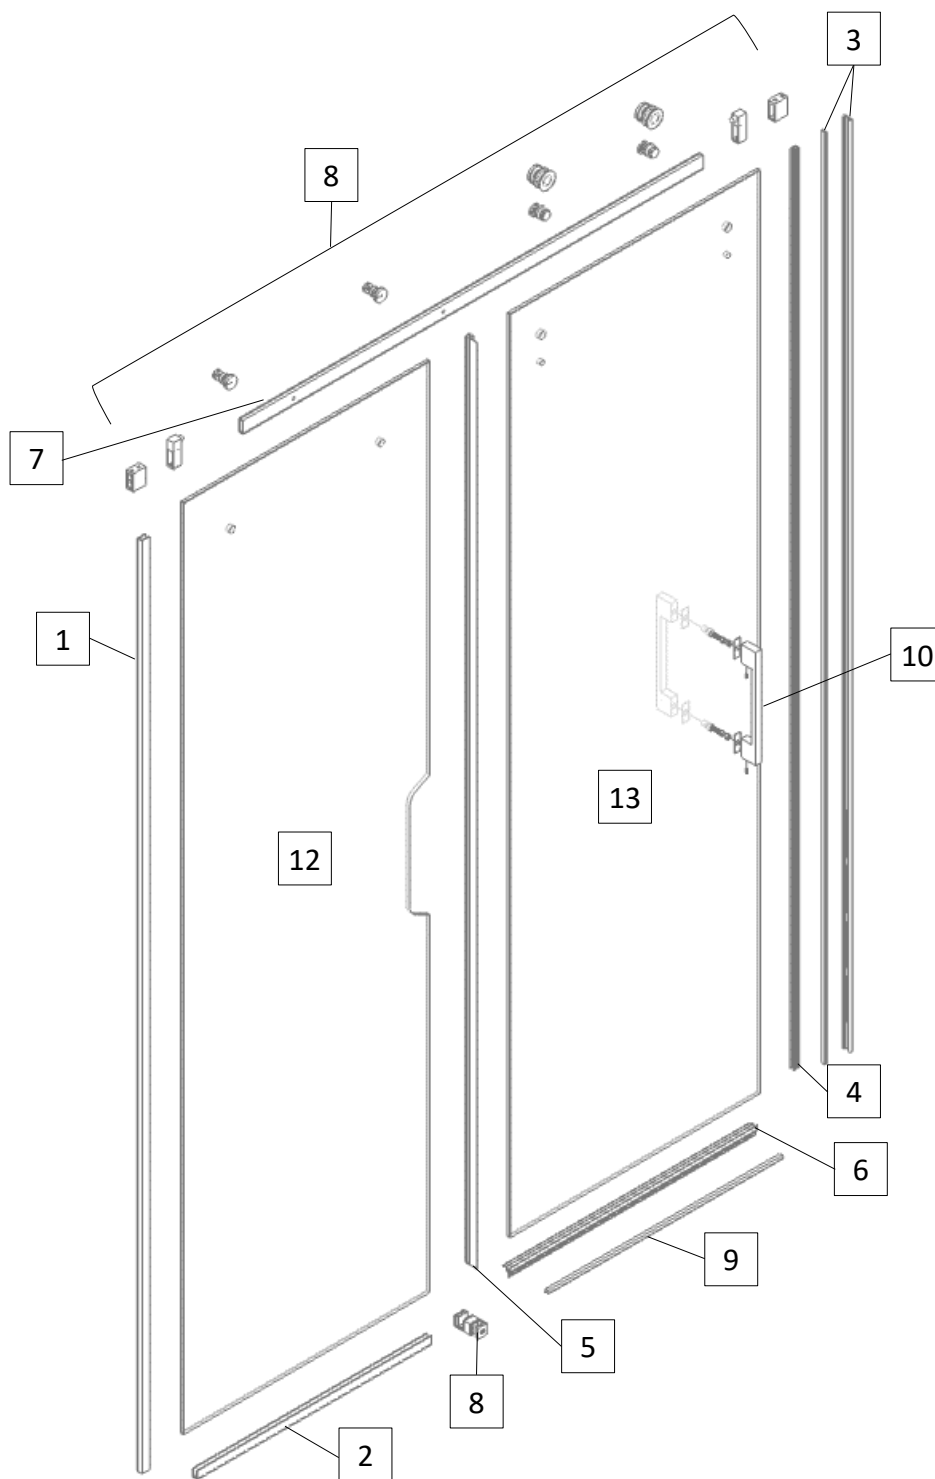

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

