


SELMA


Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины
Shower enclosure installation assembly

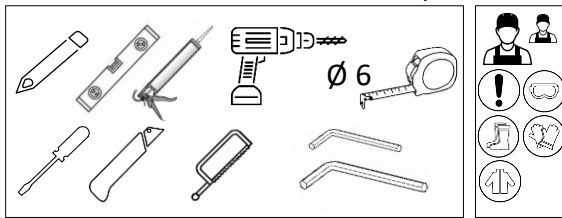


1.		PAL-01	1
2.		PAL-01B	1
3.		PAL-01B_2	1
4.		PAL-01B_3	1
5.		DZT1000CHR	1
6.		SU45CHKANT SET	1
7.		MF-42/8-ER	1
8.		R1653308	1
9.		400211PS-013	1
10.		M981R - 180CH / M981L - 180CH	2
11.		PGB-902	6
11.1		5213150	6
12.		NLO-ZD-2856	1
13.		SC-ALU8X9NEW	1
14.R		SC-SL-UZL90L	1
15.R		SC-SL-UZL180R	1
14.L		SC-SL-UZL180L	1
15.L		SC-SL-UZL90R	1
16.		BB 52 135 19	3
17.		3,5x35 SK1SET; Ø 6	2
18.		8 mm Safety Glass	1
19.		8 mm Safety Glass	1
20.		8 mm Safety Glass	1
21.		8 mm Safety Glass	1
22.		8 mm Safety Glass	1



SELMA	A + B (mm)	C (mm)	H (mm)
80X80SEL	794-800	787-792	1988
90X90SEL	894-900	887-892	1988
100X100SEL	994-1000	987-992	1988
110X110SEL	1094-1100	1087-1092	1988
120X120SEL	1194-1200	1187-1192	1988
120X80SEL	1194-1200	787-792	1988
120X90SEL	1194-1200	887-892	1988

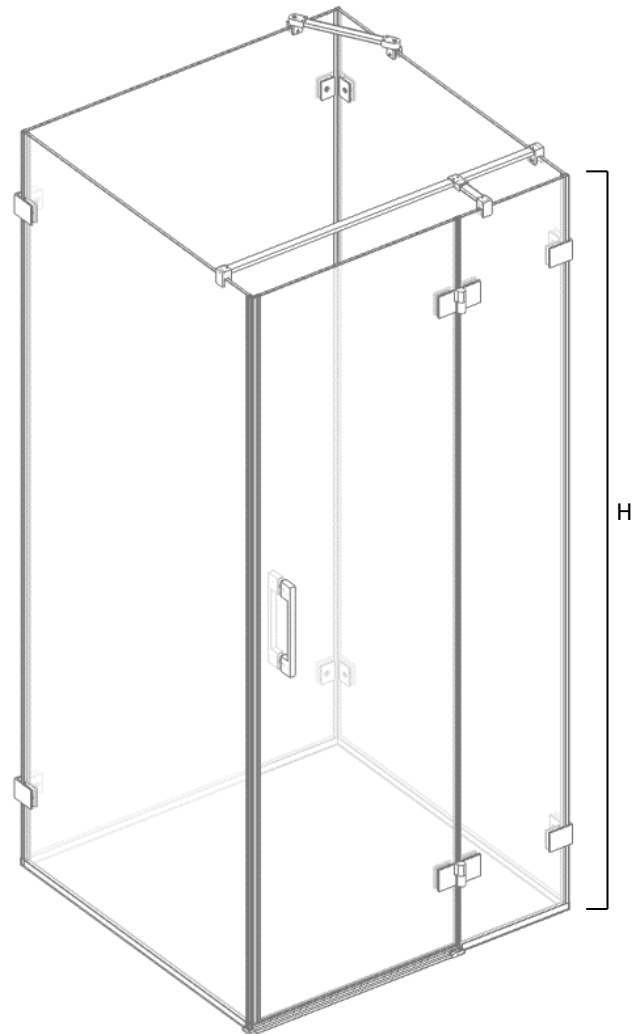

LEFT

RIGHT

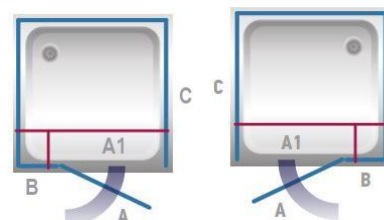

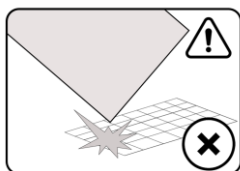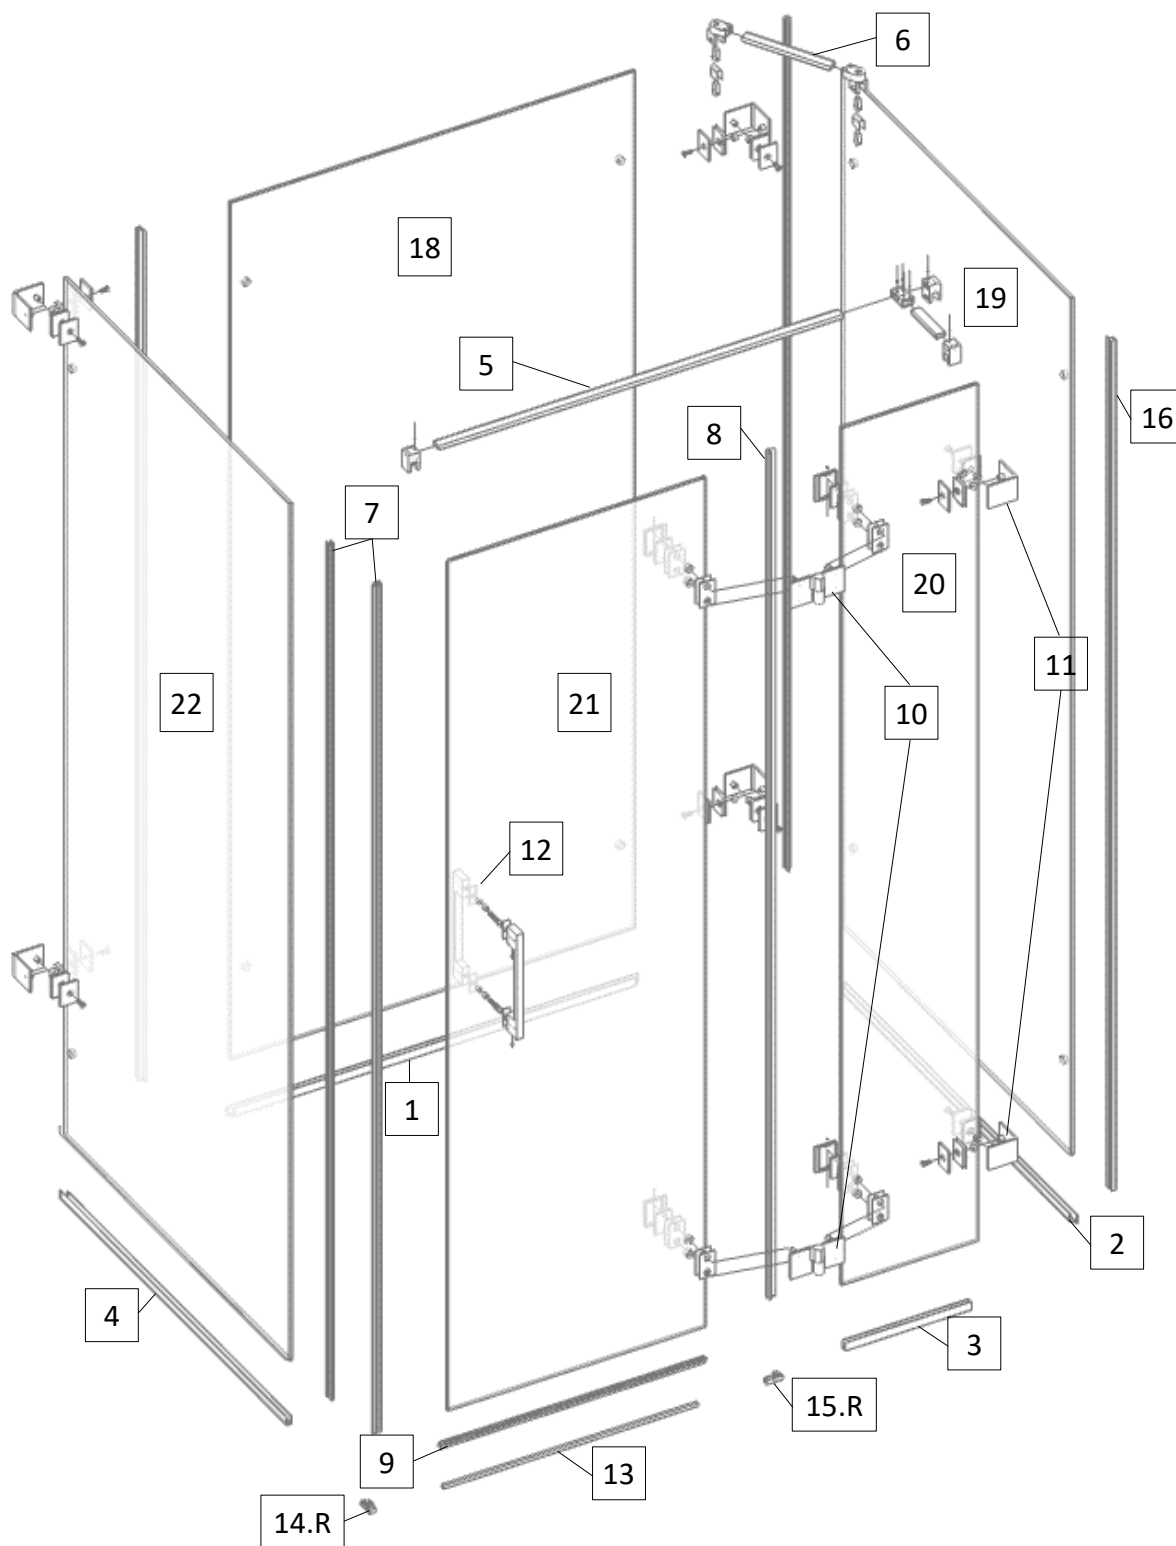




Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.




1.A








SELMA	P, mm	A+B1, mm	C1, mm
80X80SEL	800 x 800	788	788
90X90SEL	900 x 900	888	888
100X100SEL	1000 x 1000	988	988
110X110SEL	1100 x 1100	1088	1088
120X120SEL	1200 x 1200	1188	1188
120X80SEL	1200 x 800	1188	788
120X90SEL	1200 x 900	1188	888




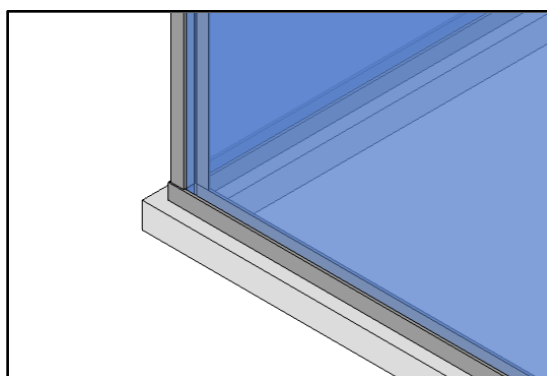
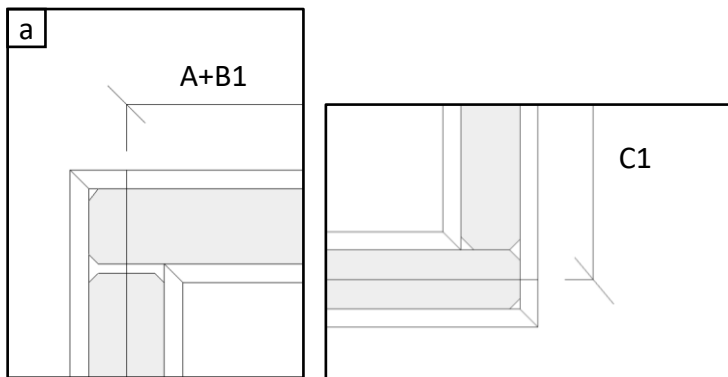
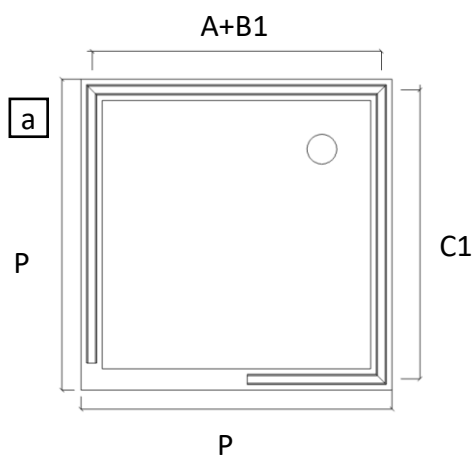






1.B





SELMA	D, mm	S, mm
80X80SEL	800	800
90X90SEL	900	900
100X100SEL	1000	1000
110X110SEL	1100	1100
120X120SEL	1200	1200
120X80SEL	1200	800
120X90SEL	1200	900

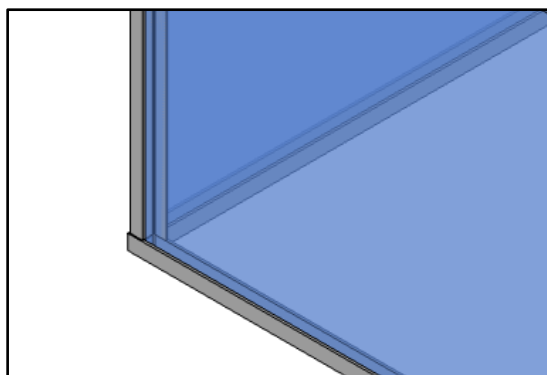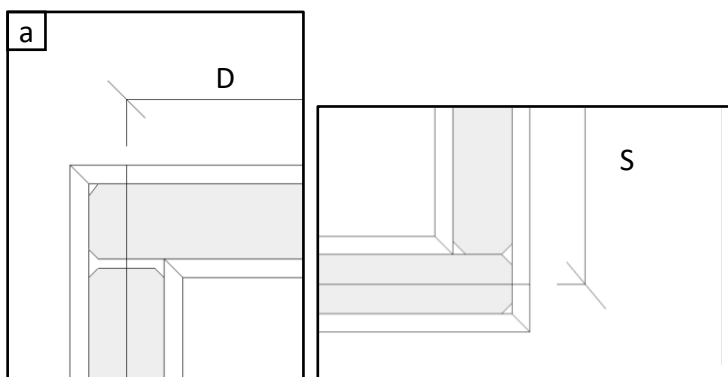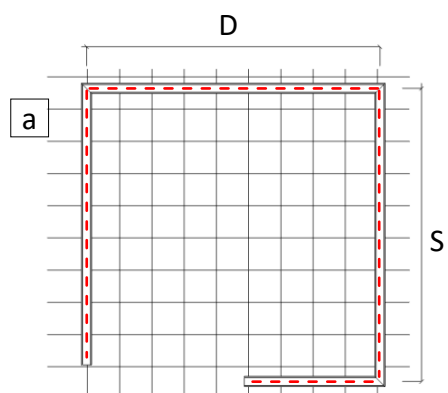

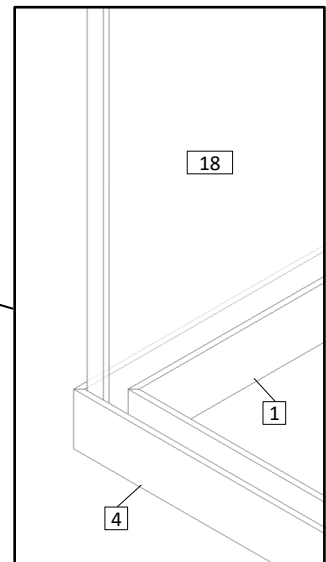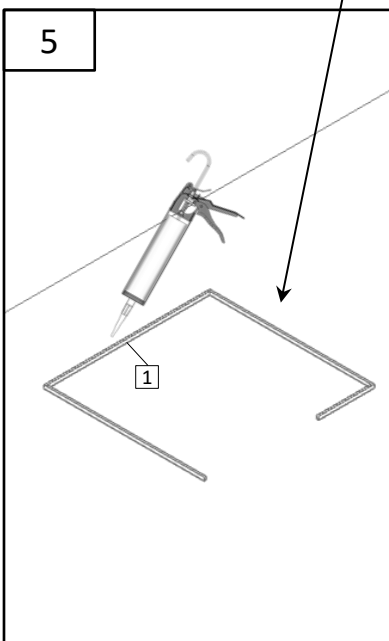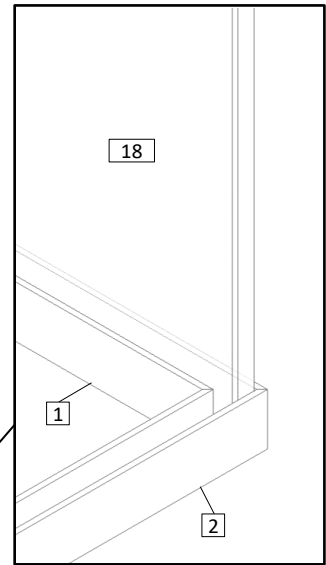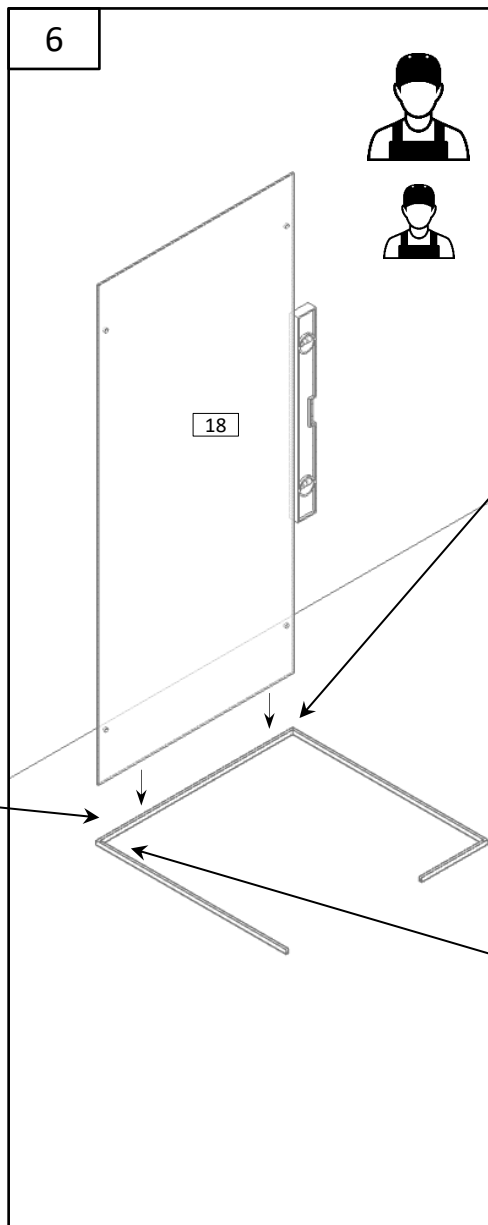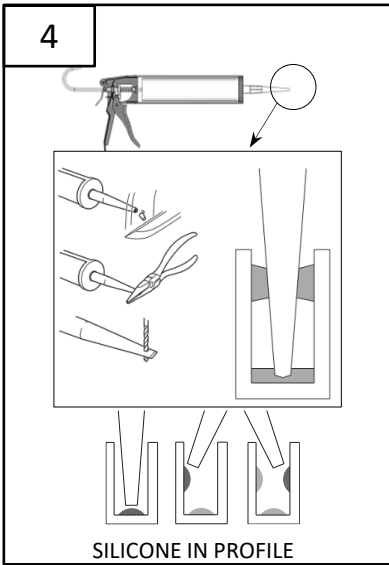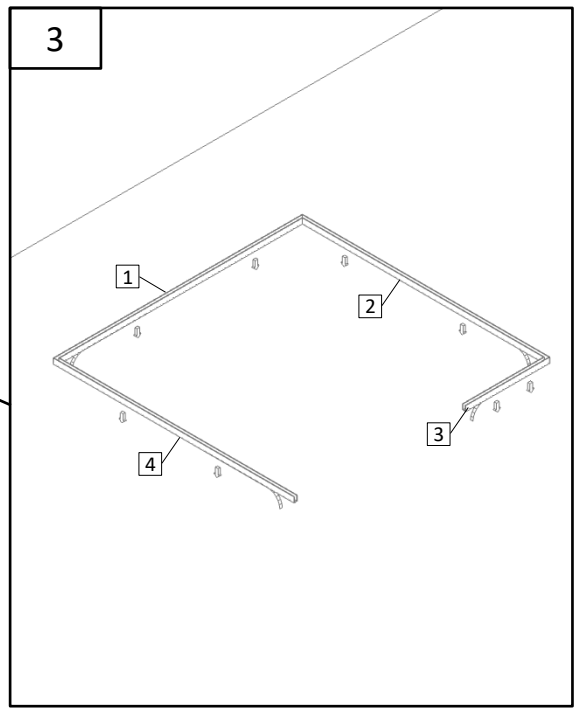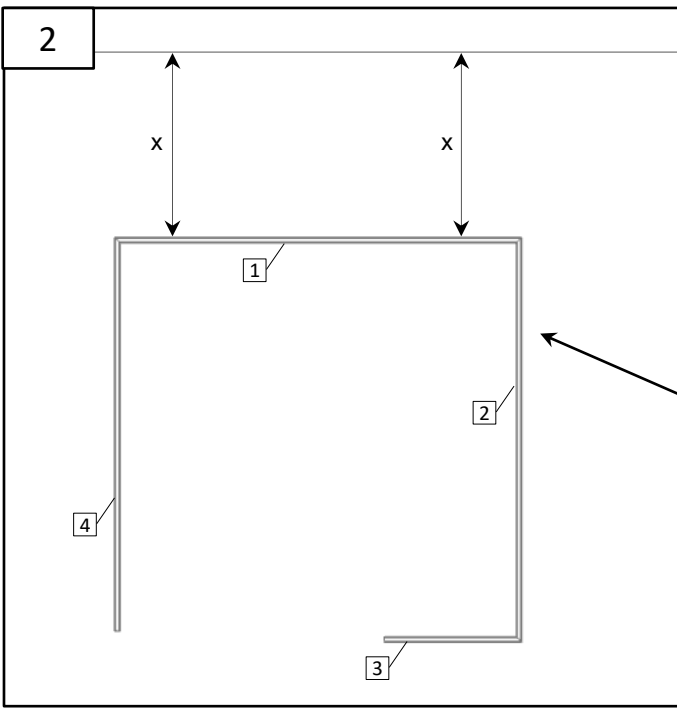


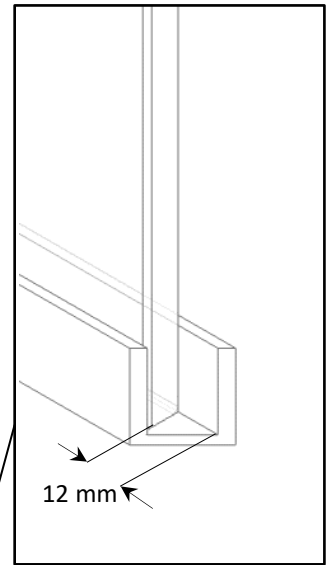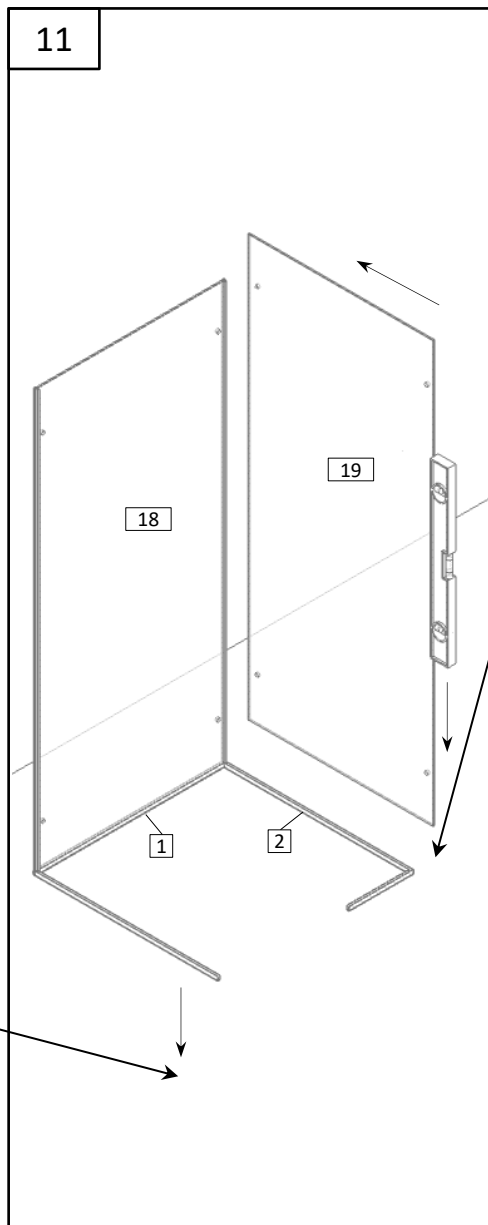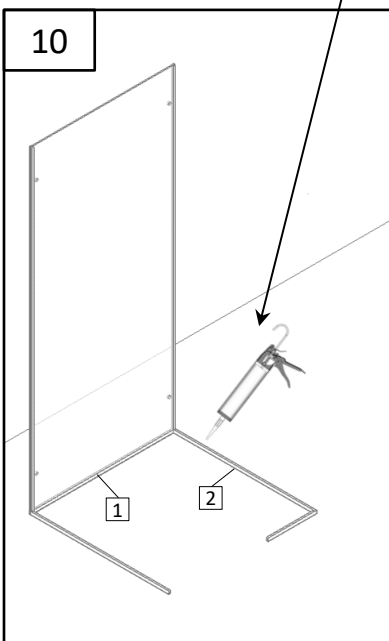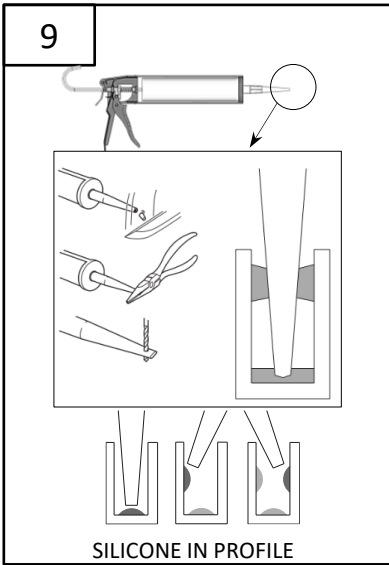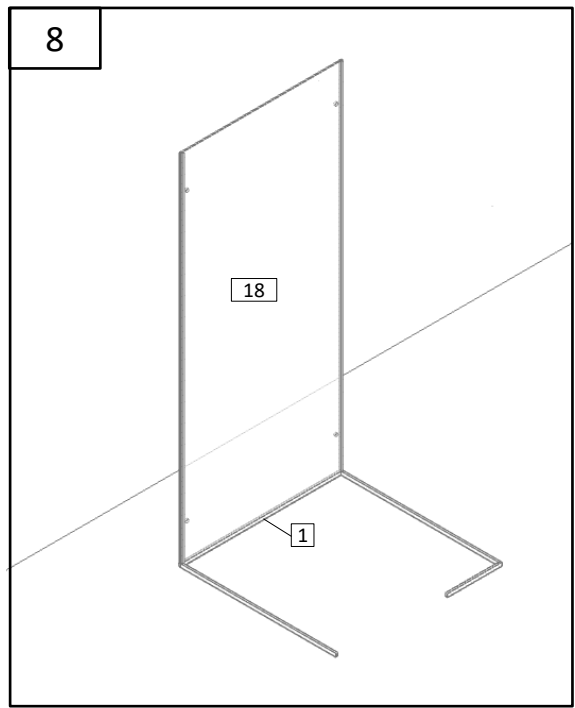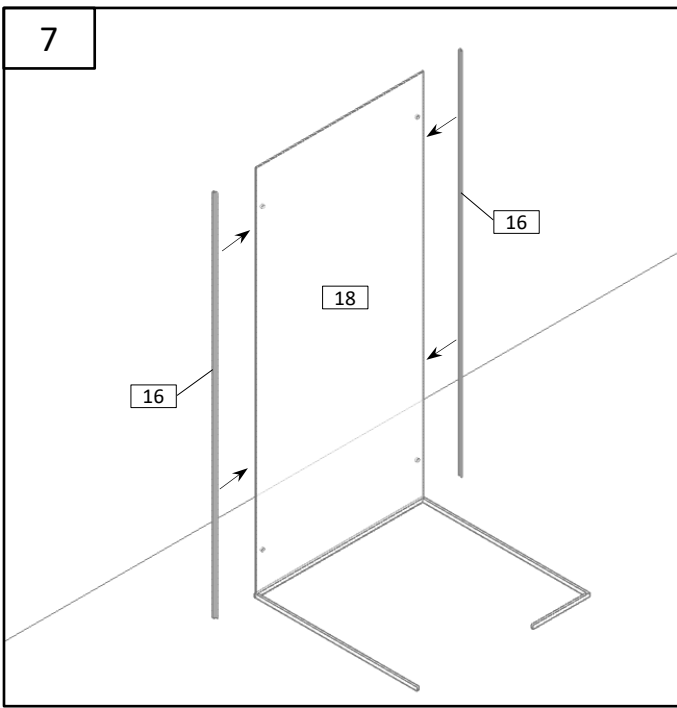

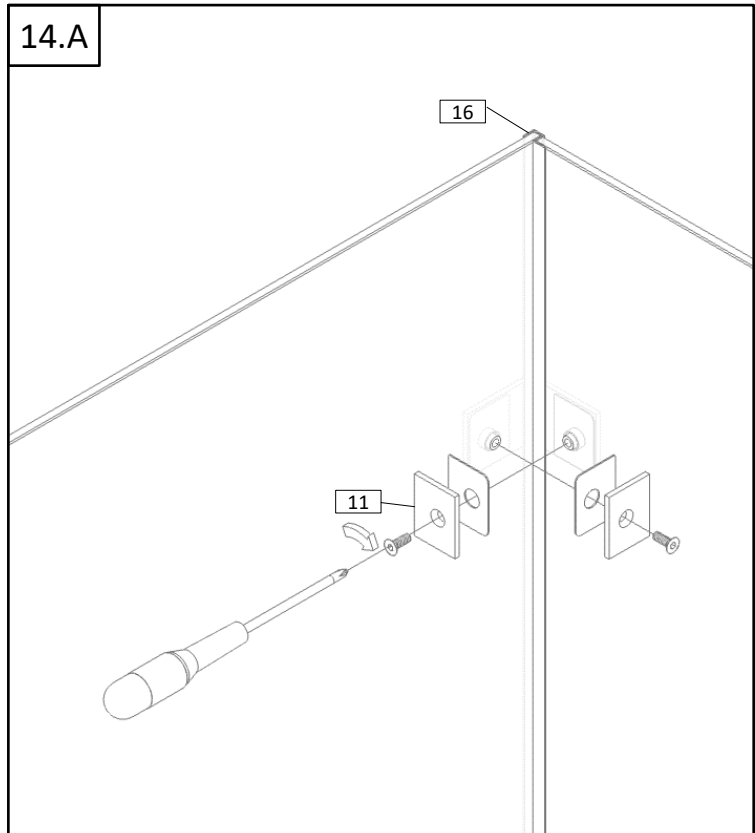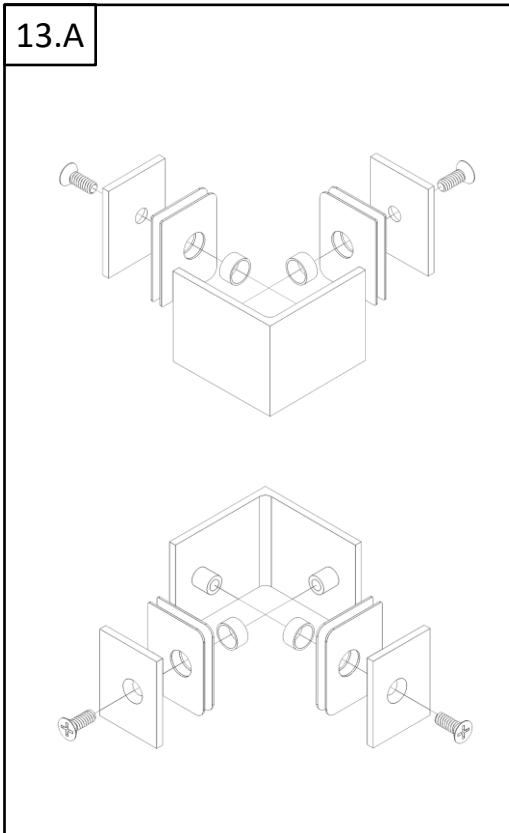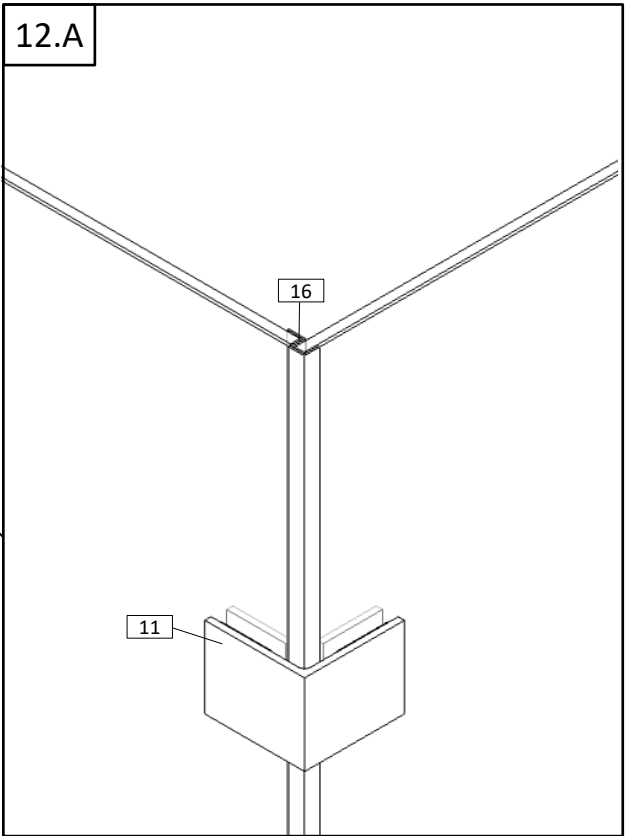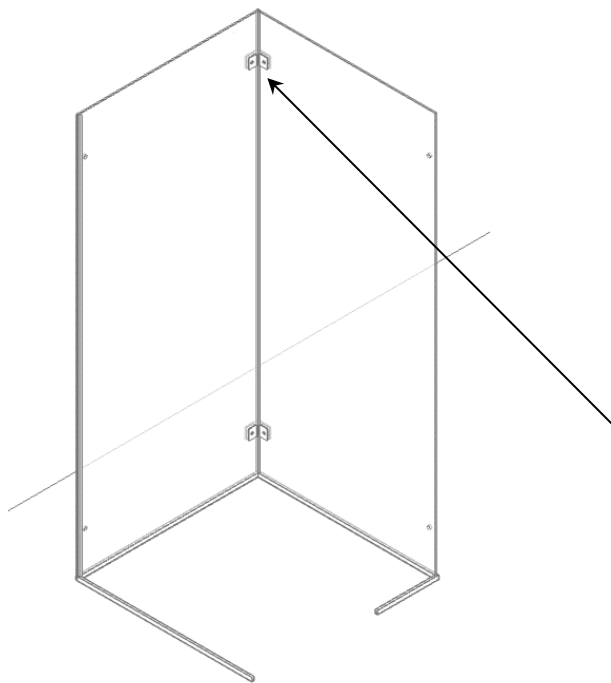


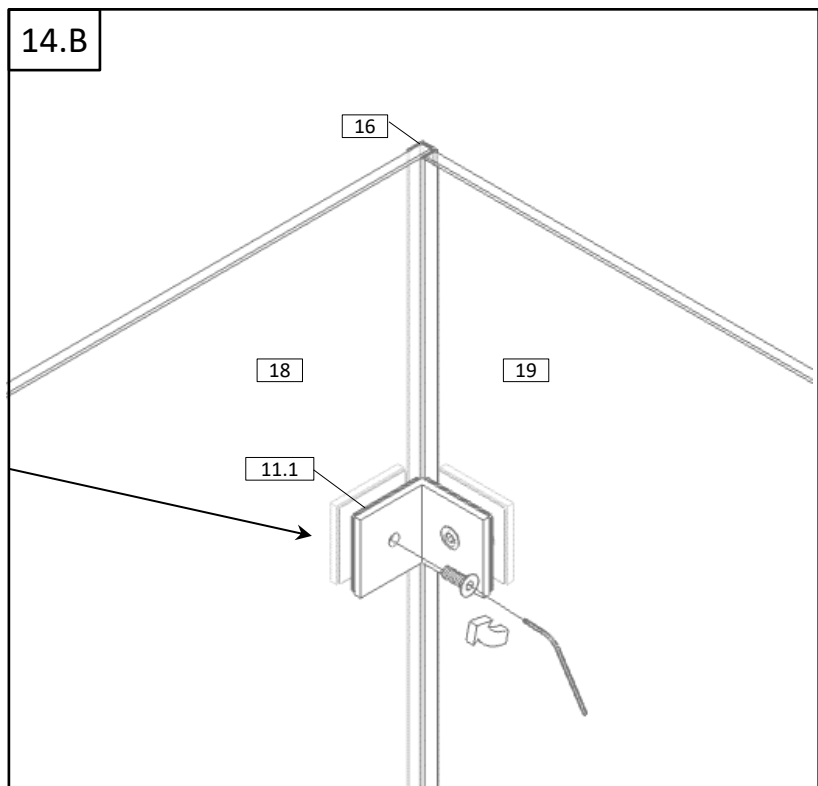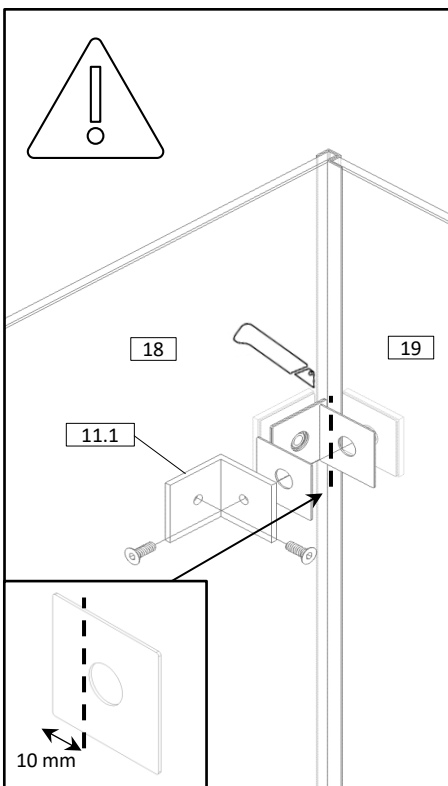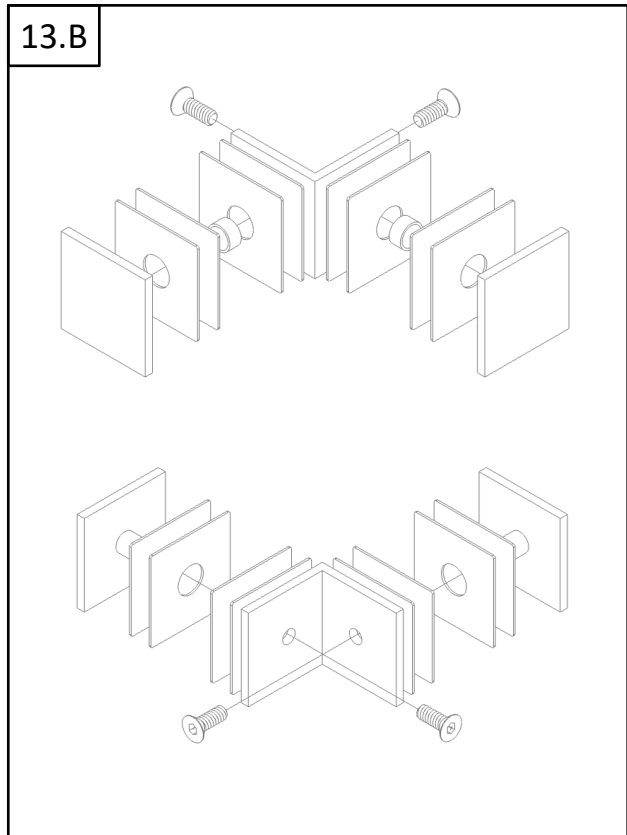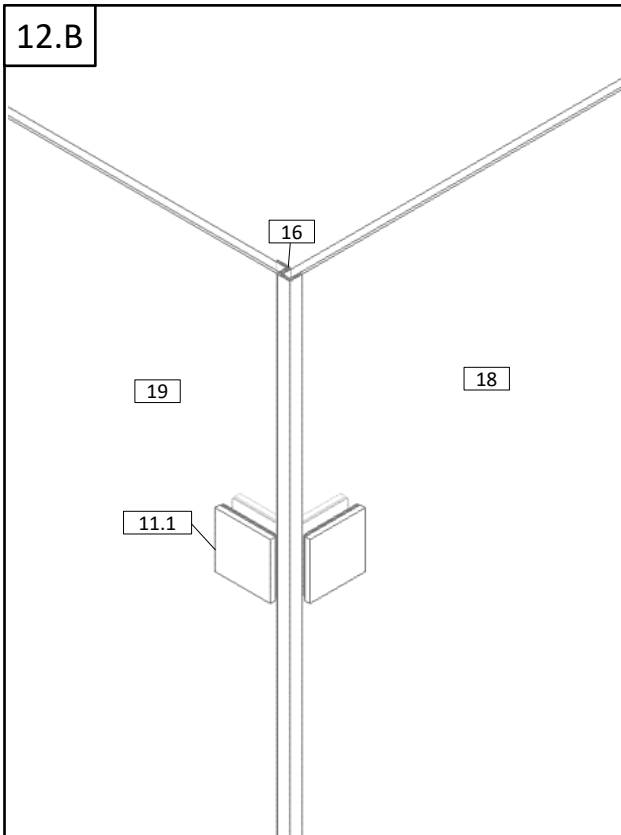


15

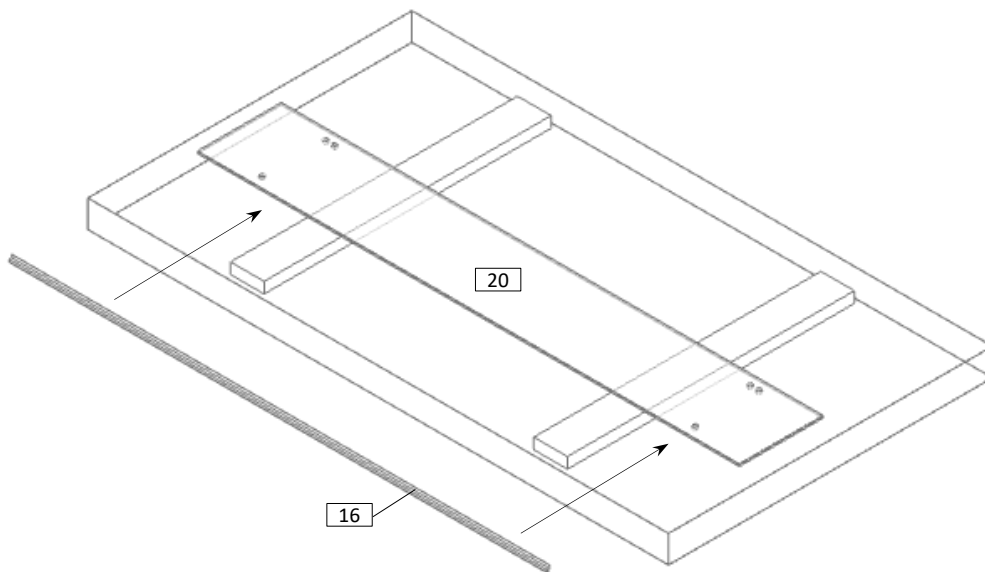



16



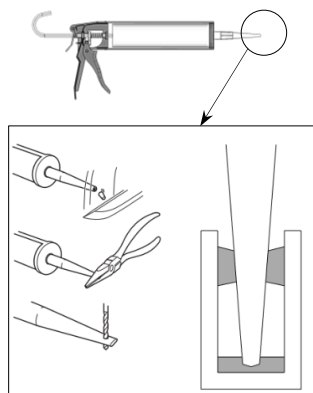






18




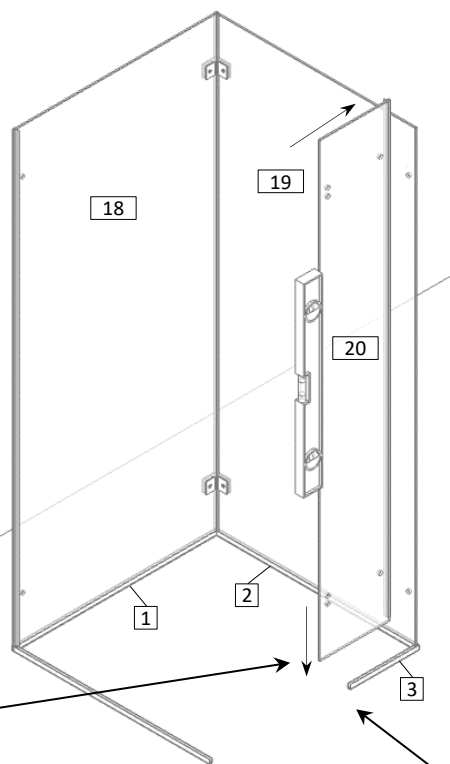





17



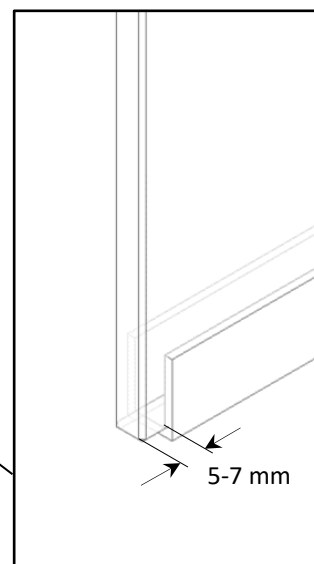
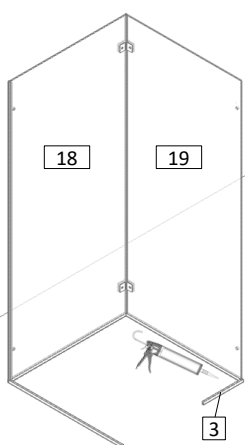


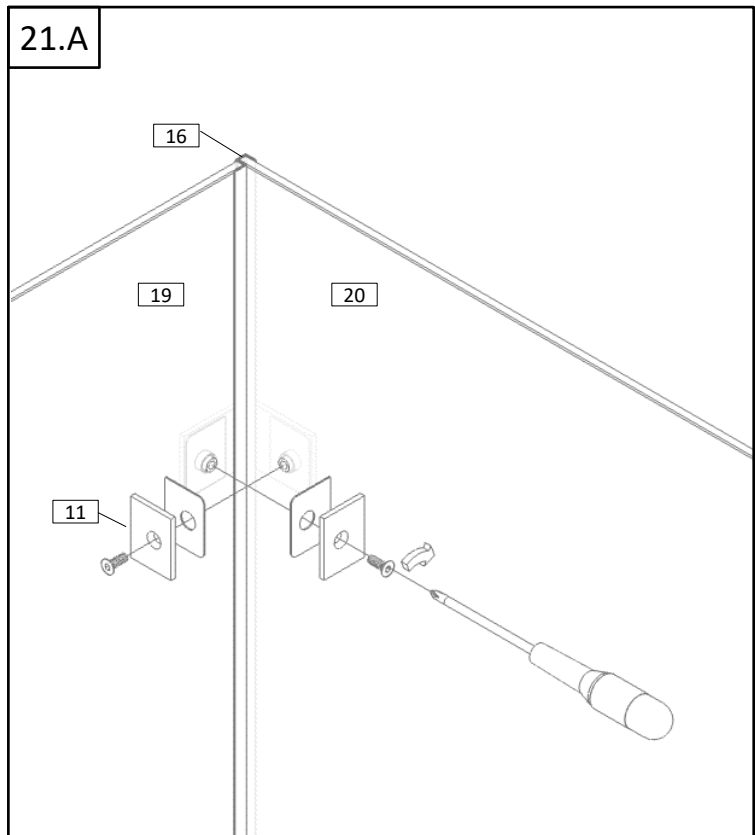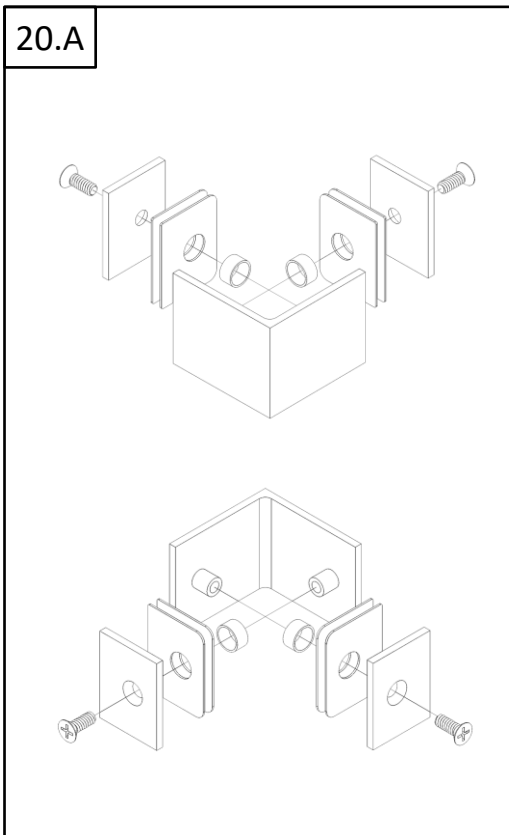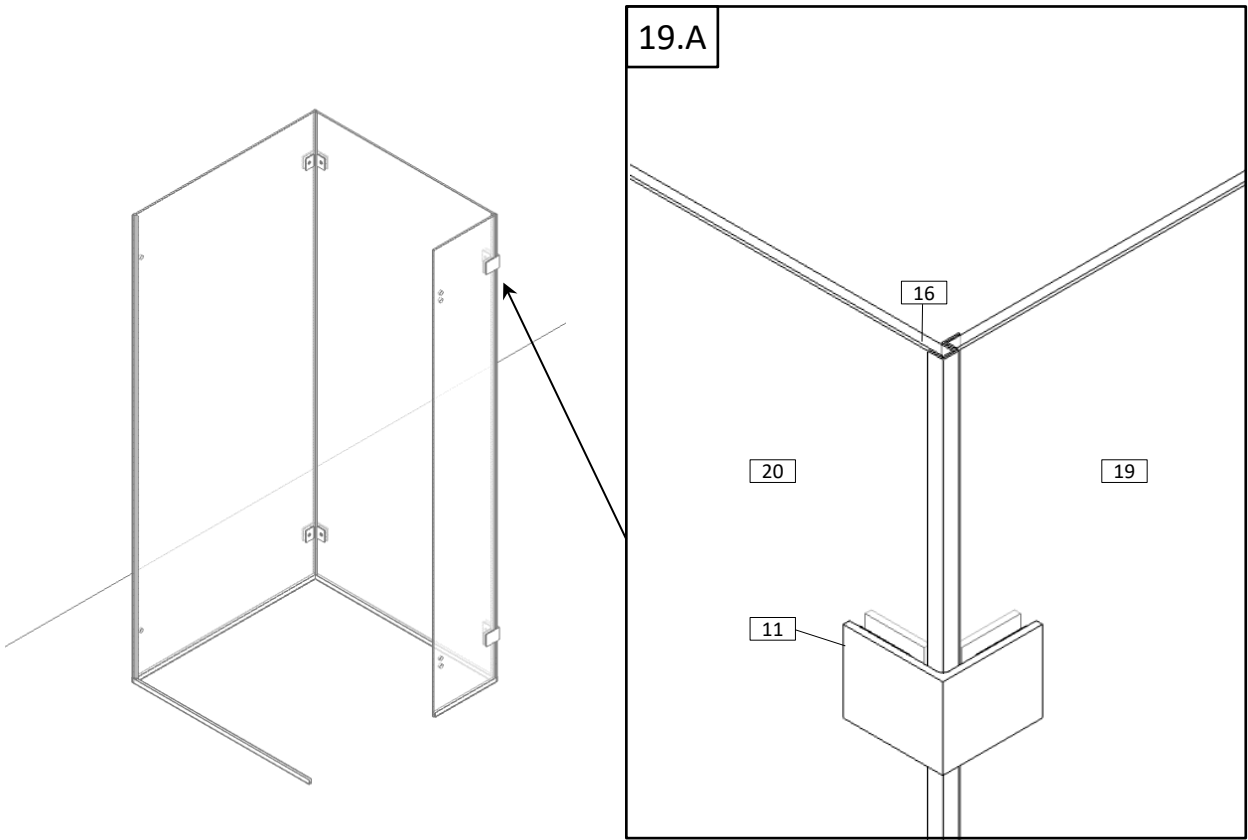

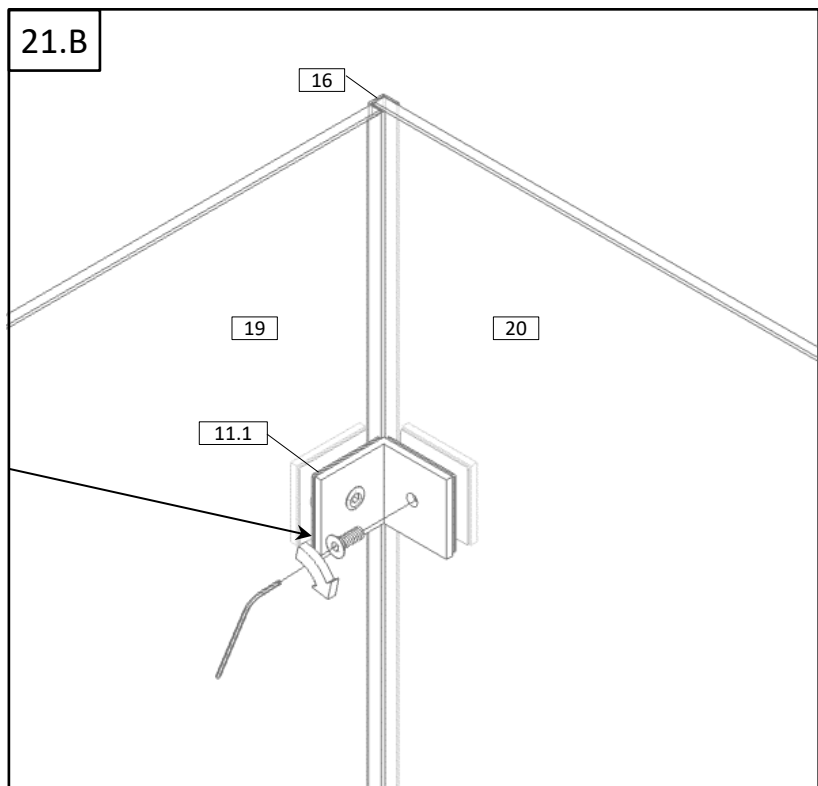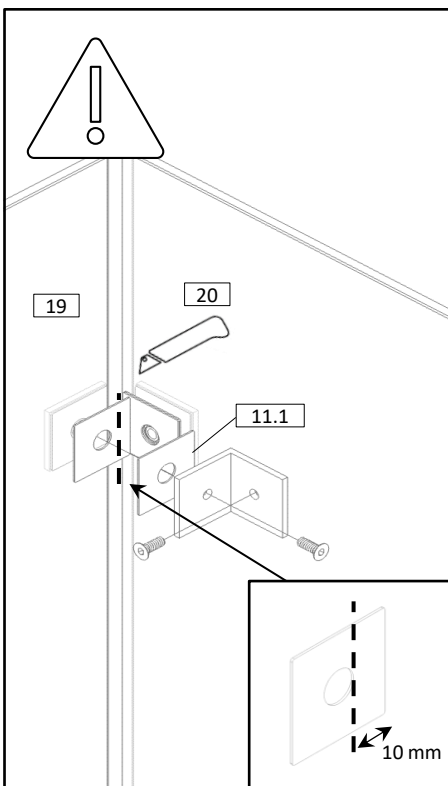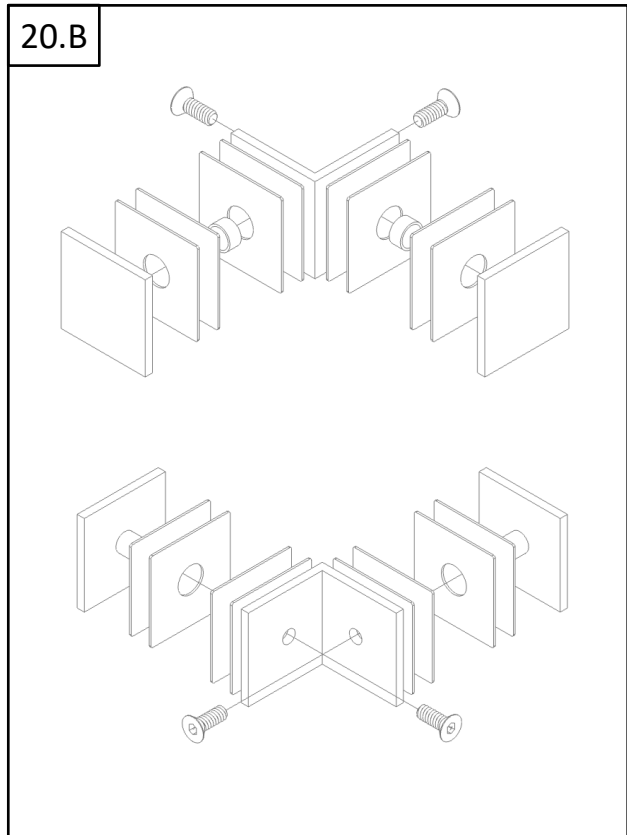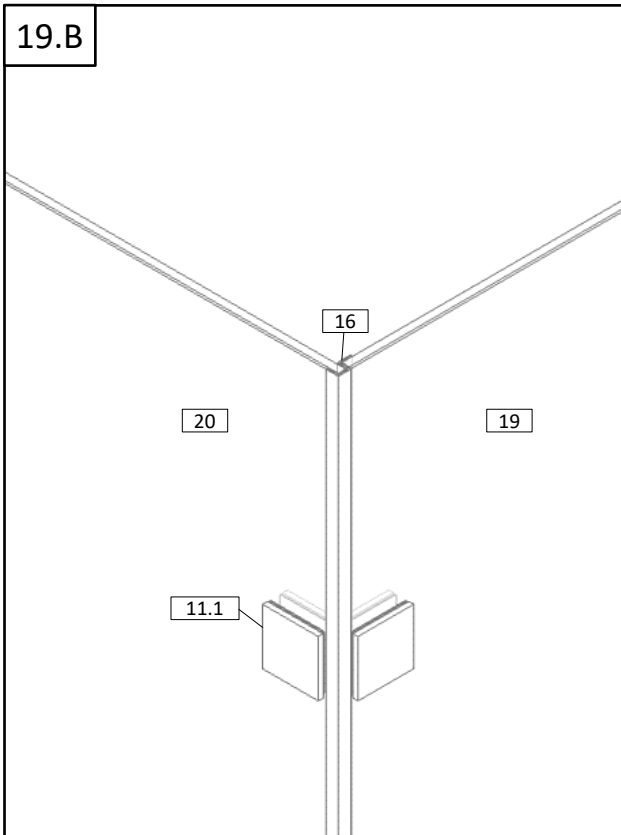

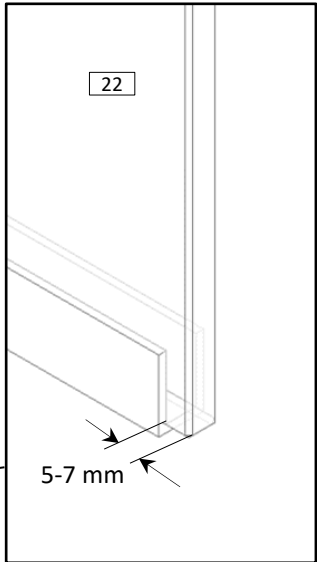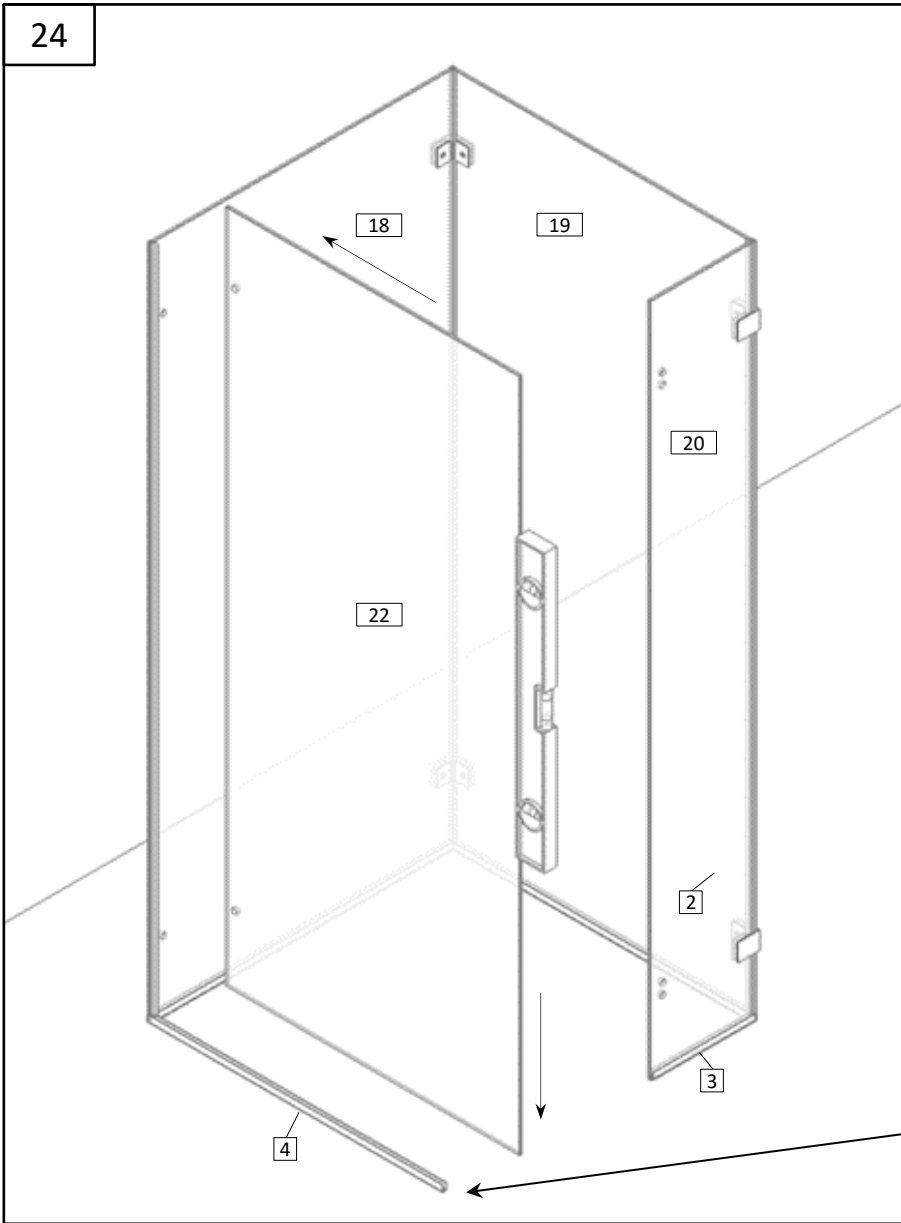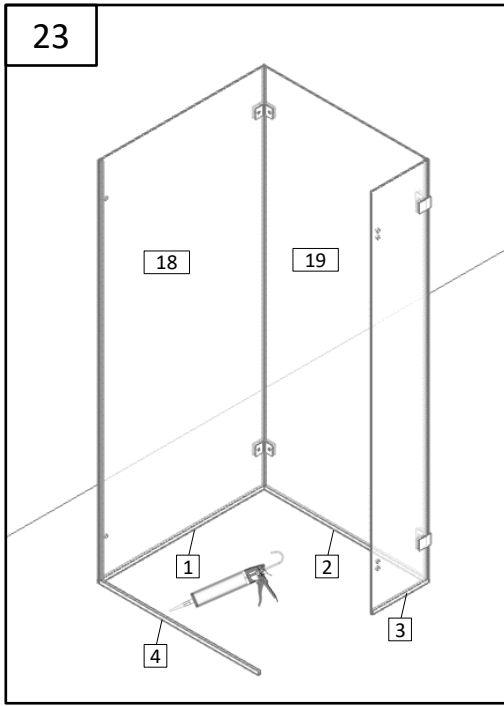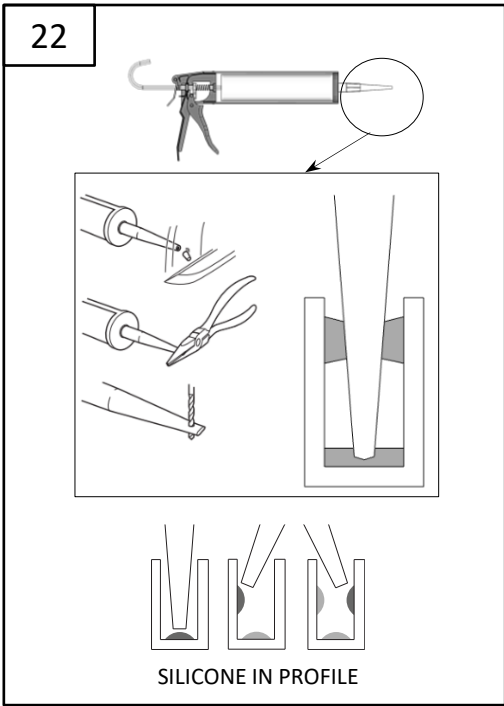


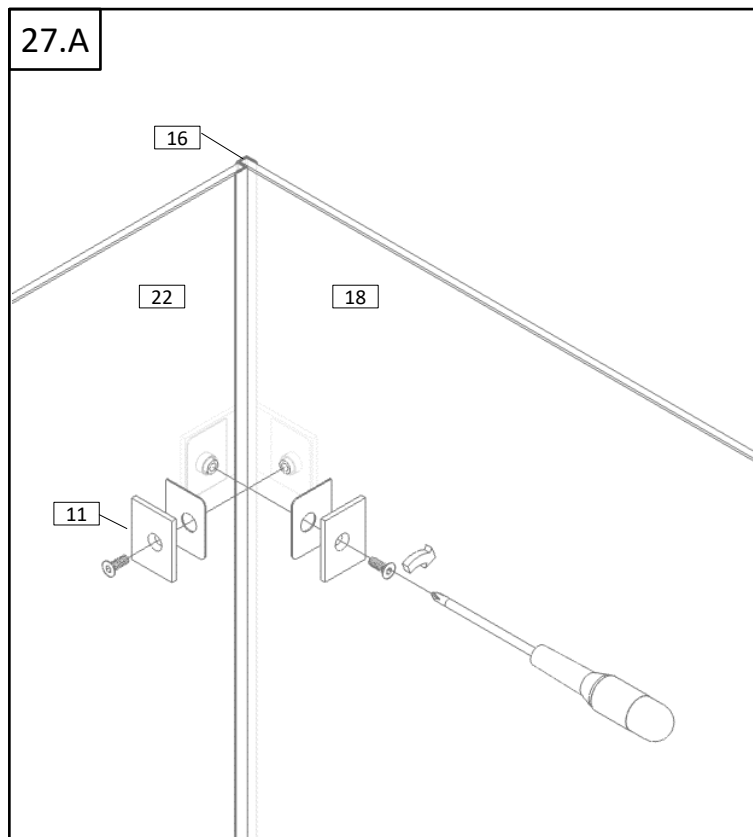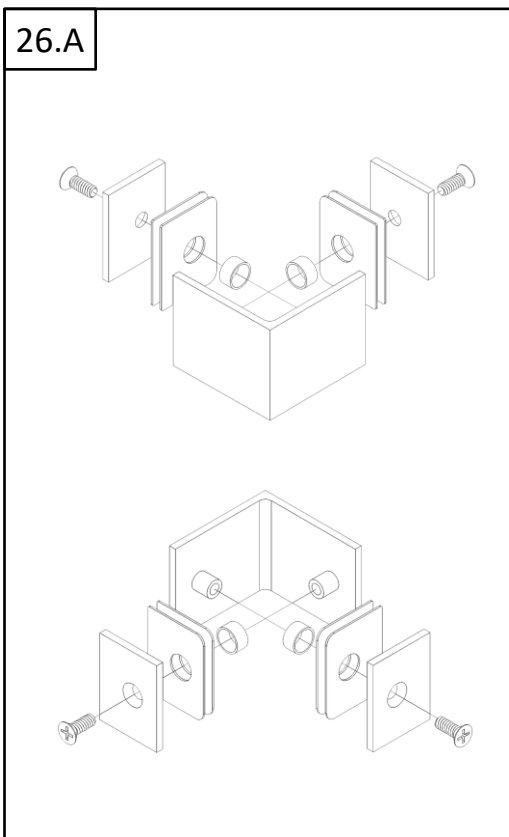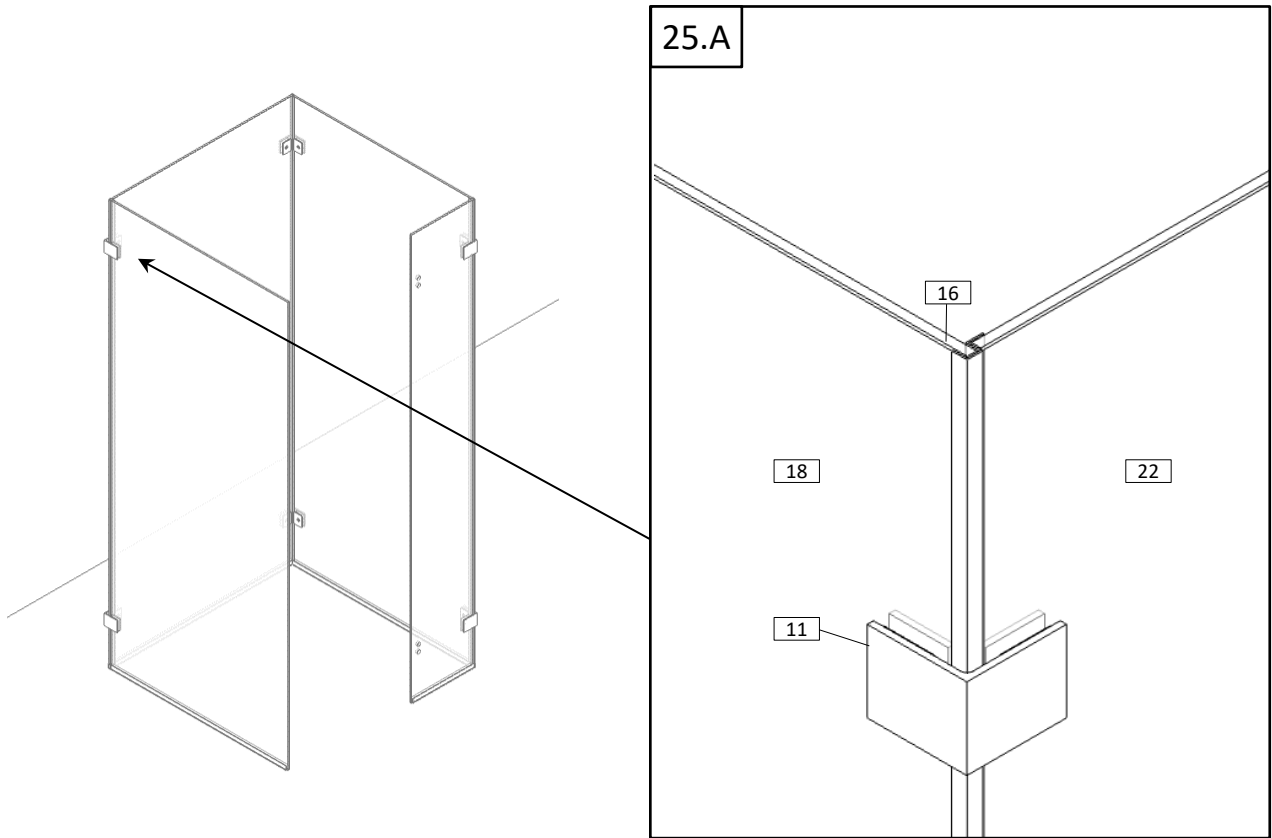

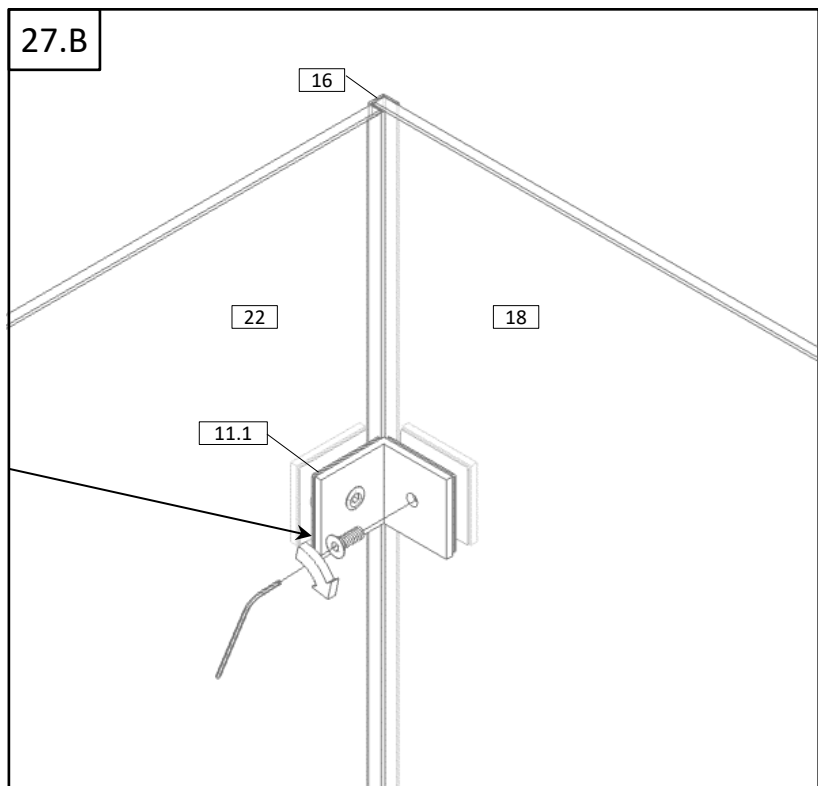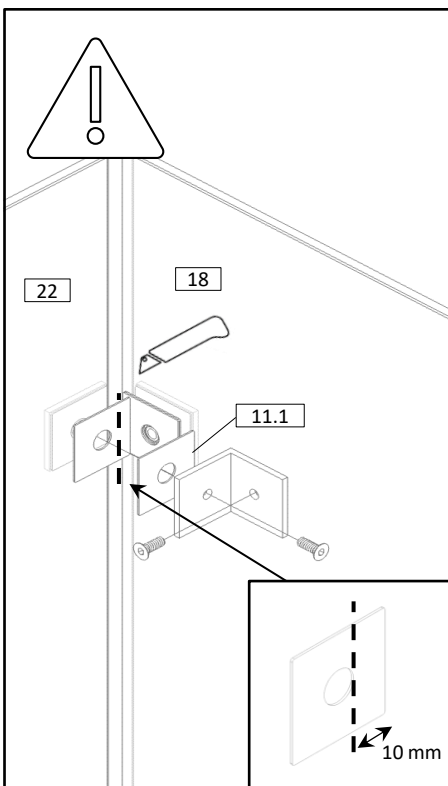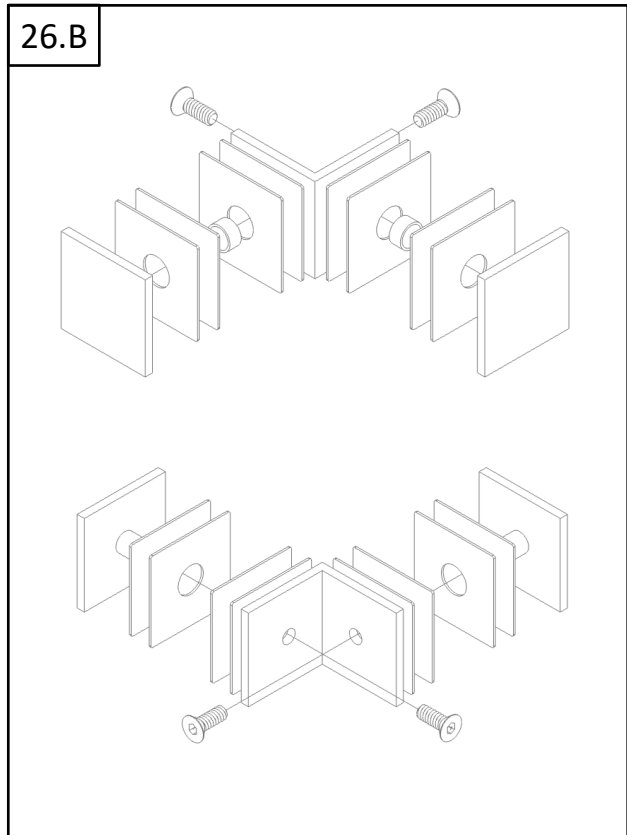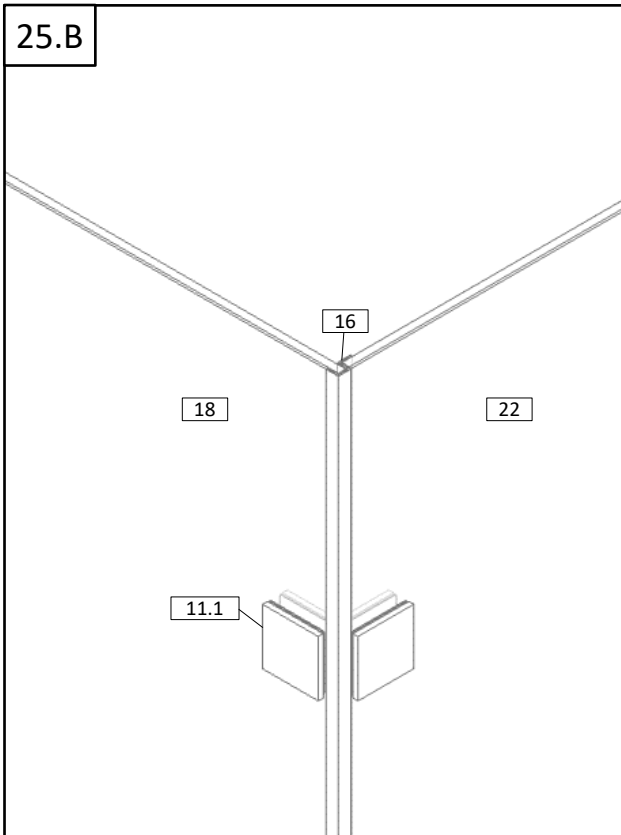



RIGHT

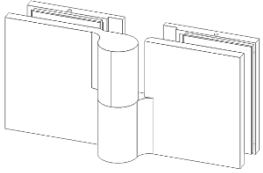

LEFT

