




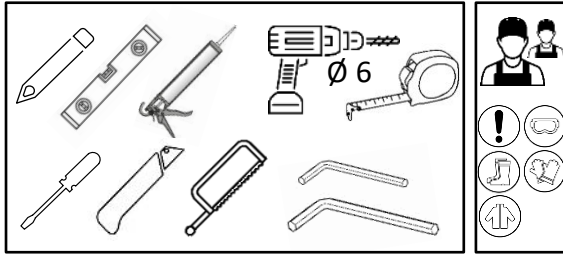











SERENA


Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери


Shower door installation instructions



1.		PAL-01	1
2.		PAL-01B	1
3.		GC-2032/ MF-29-5MAGN	1
4.		8850KUO-8-2010	1
5.		2919-8-2SERE	1
6.		SF67-8-SERE	1
7.		8864-KUO-8	1
8.		S001-PROF-SER	1
9.		S001-SER + SK2SET	1
10.		SC-ALU8X9NEW	1
11.		R50CH-SER	1
12.		3,5X35 SK1SET	2
13.		8 mm Safety Glass	1
14.		8 mm Safety Glass	1


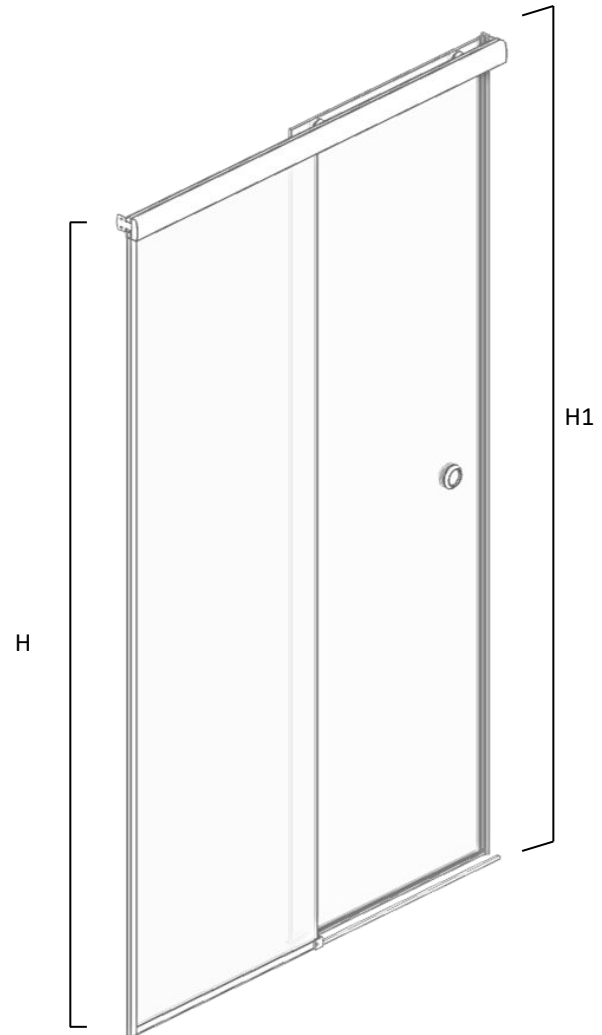




SERENA	A (mm)	B (mm)	H (mm)	H1 (mm)
100SER	980-1000	520	2000	2005
110SER	1080-1100	570	2000	2005
120SER	1180-1200	620	2000	2005
130SER	1280-1300	670	2000	2005
140SER	1380-1400	720	2000	2005
150SER	1480-1500	770	2000	2005

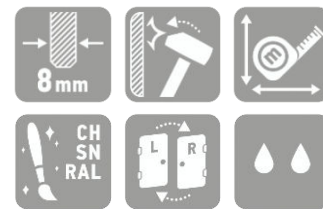

LEFT

RIGHT

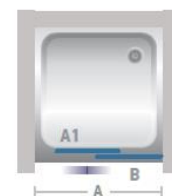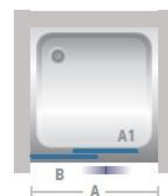

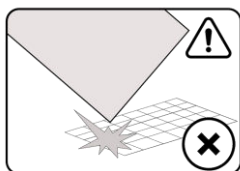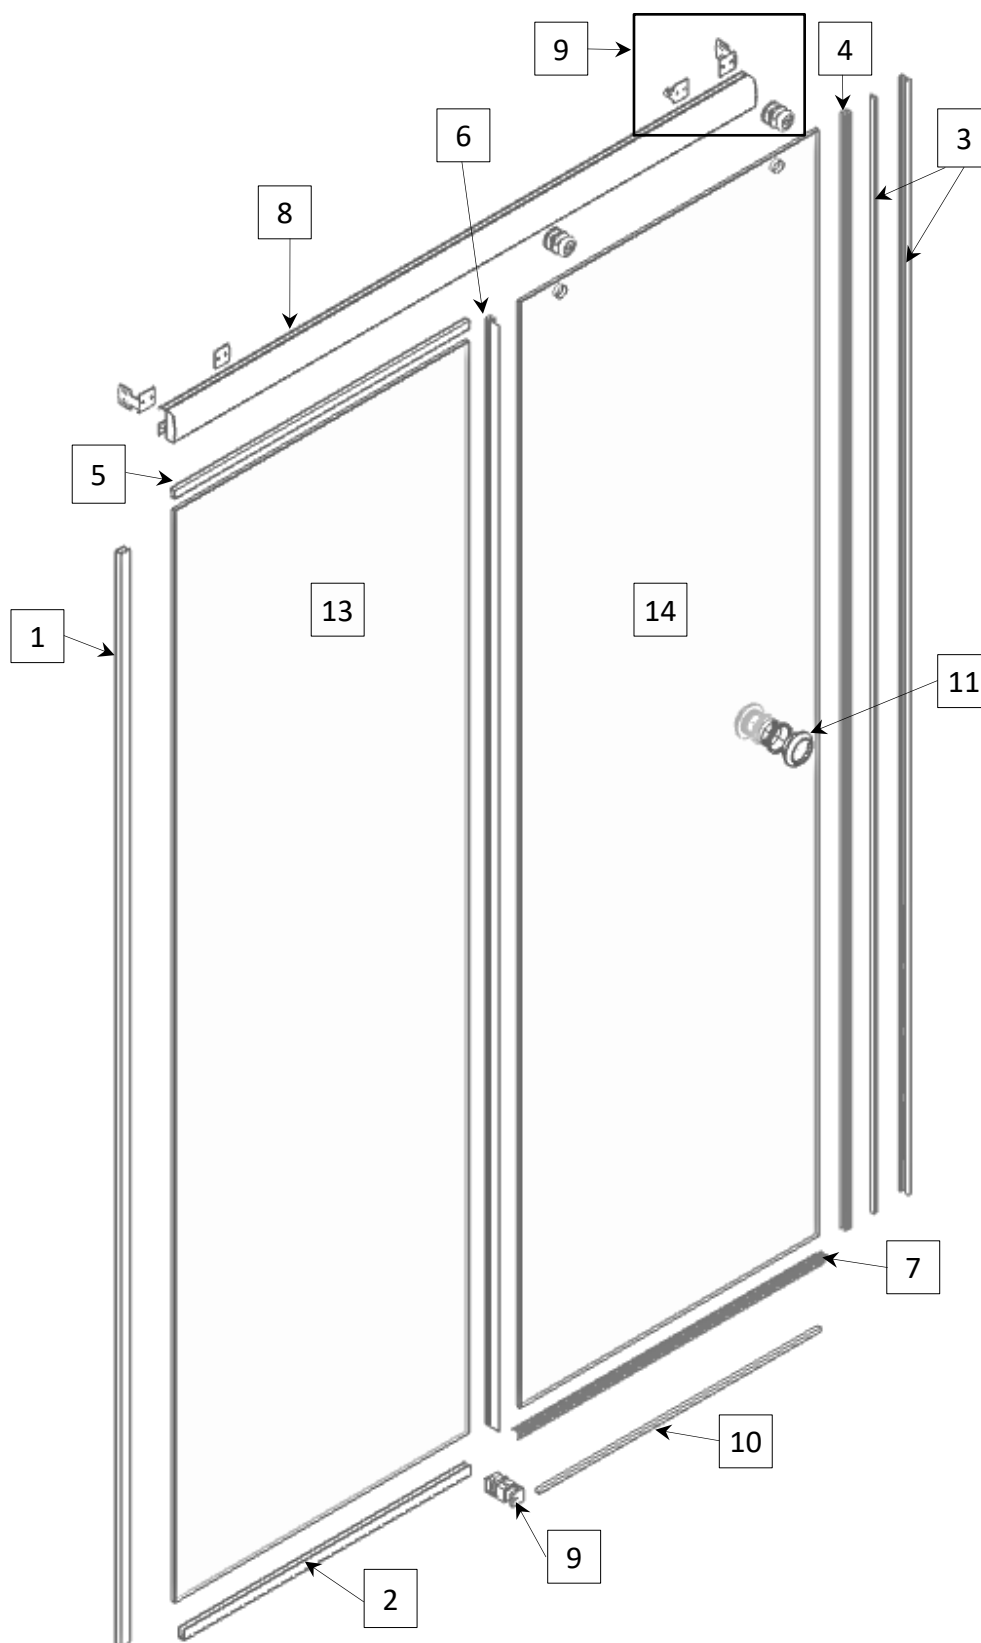

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

