




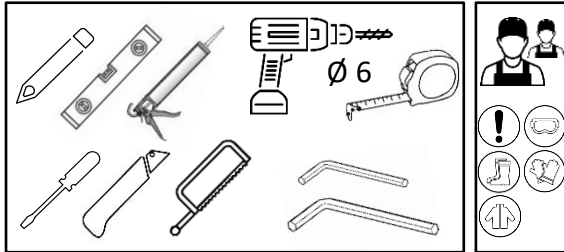


SETTE


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены


Shower wall installation instructions




1.		PAL-01	2
2.		PAL-01B	1
3.		PAL-01B	1
4.		DZT1600CHR	1
5.		3,5x35 SK1SET Ø 6	2
6.		8mm LVS_EN 12150 2:2004	1
7.		8mm LVS_EN 12150 2:2004	1

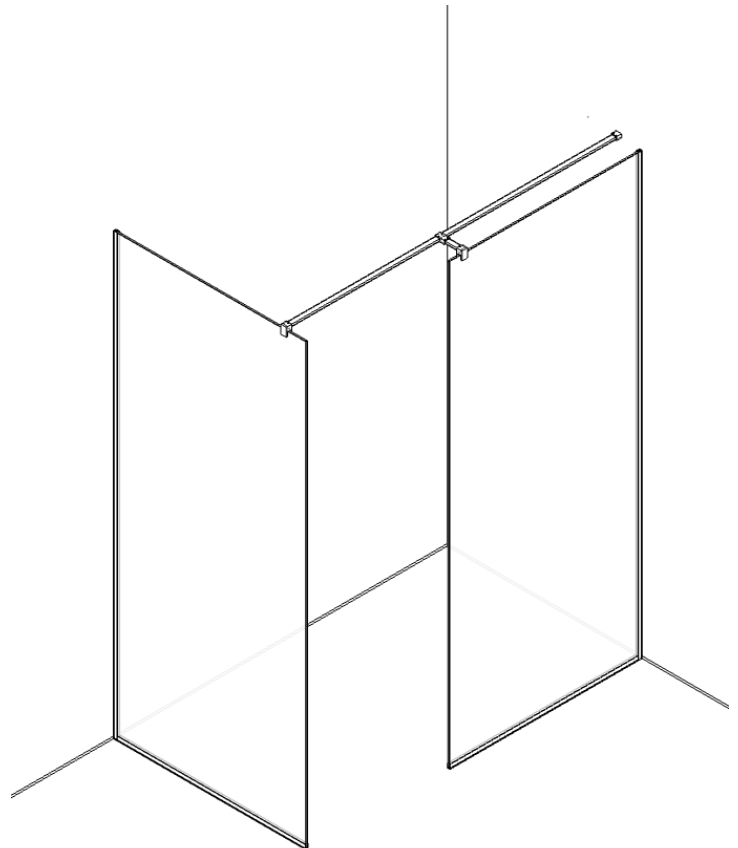

SETTE	A (mm)	A1 (mm)	C (mm)	B (mm)	H (mm)
140_80SET	1400	520	865	778-783	1988
140_90SET	1400	520	865	878-883	1988
150_90SET	1500	620	865	878-883	1988
160_90SET	1600	620	965	878-883	1988
150_100SET	1500	520	965	978-983	1988
160_100SET	1500	620	965	978-983	1988







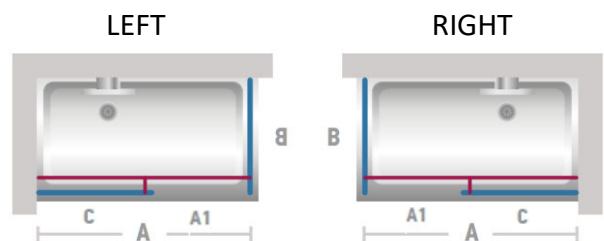










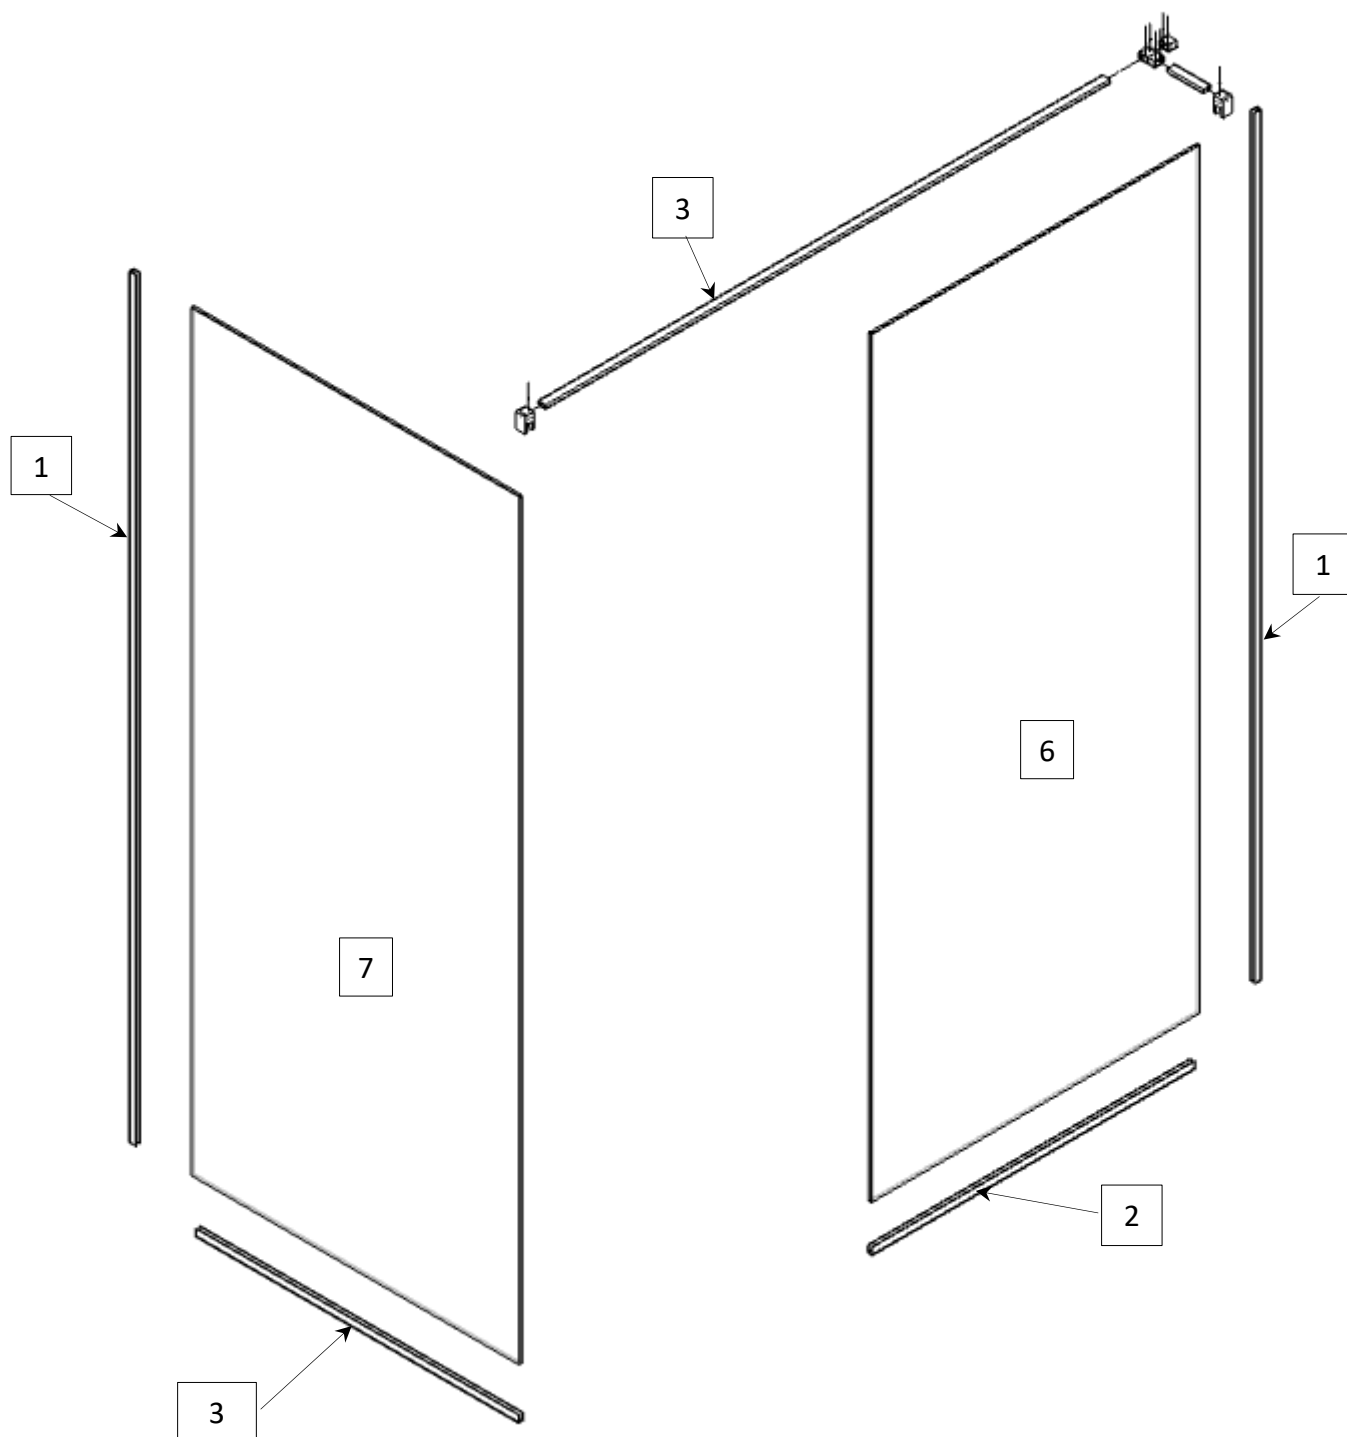









Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

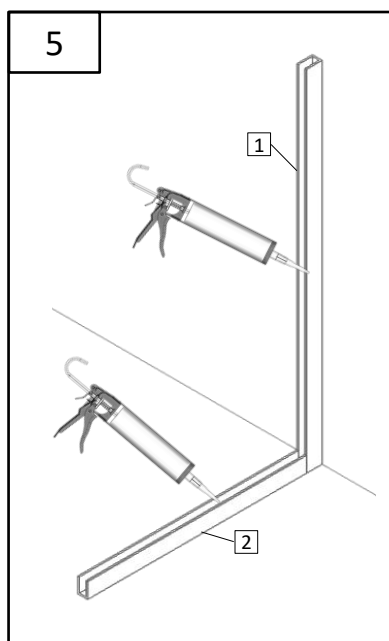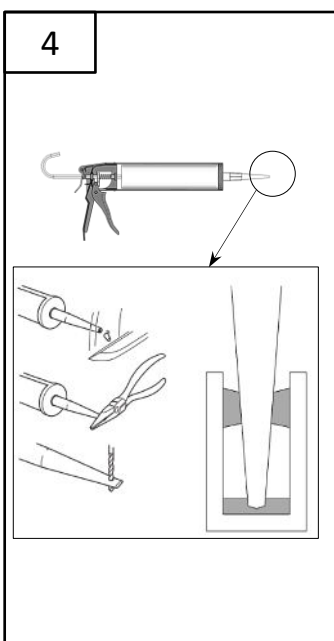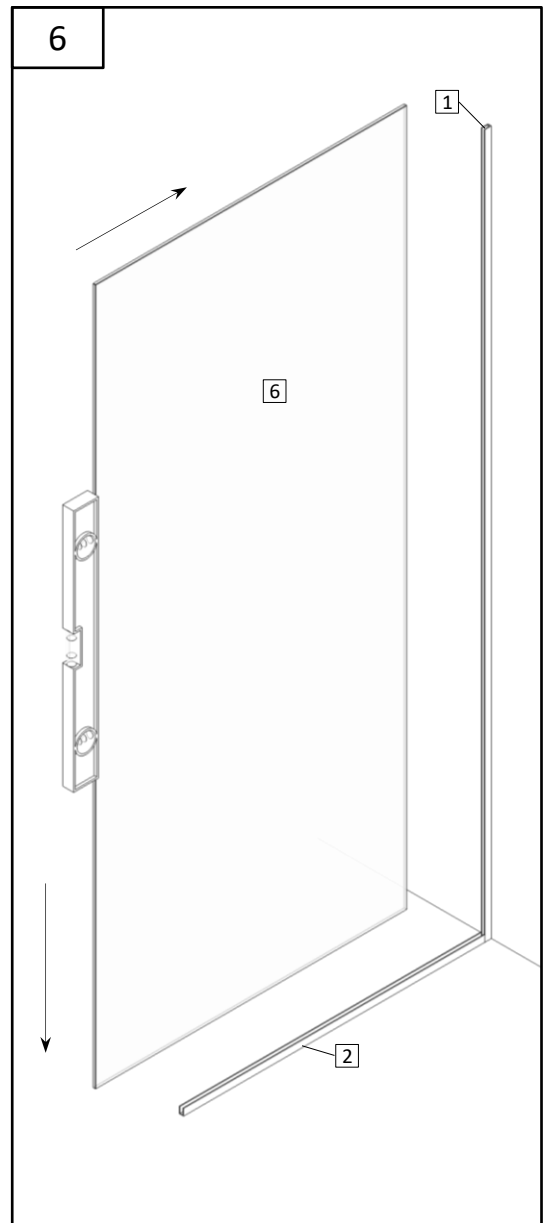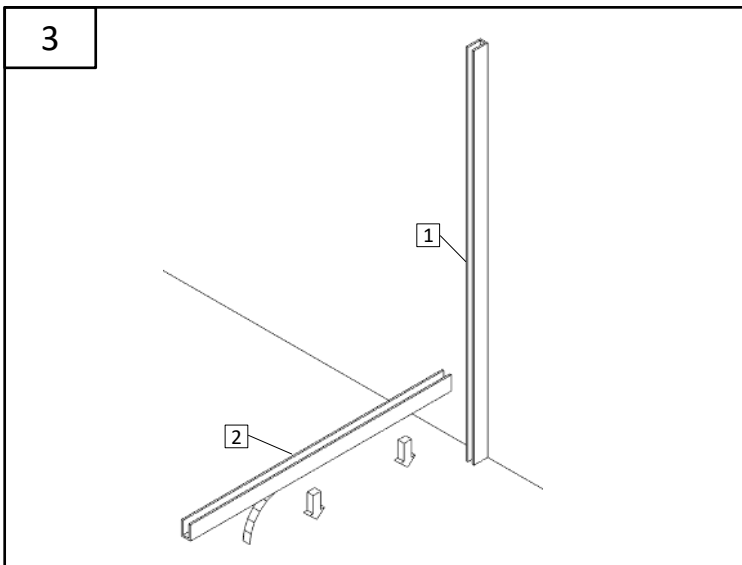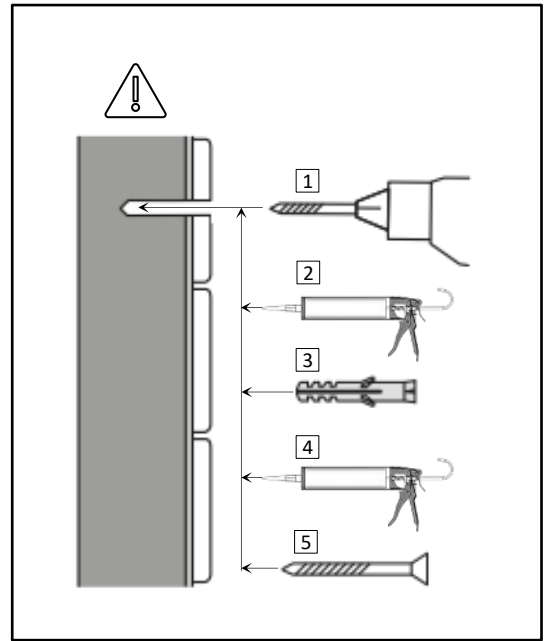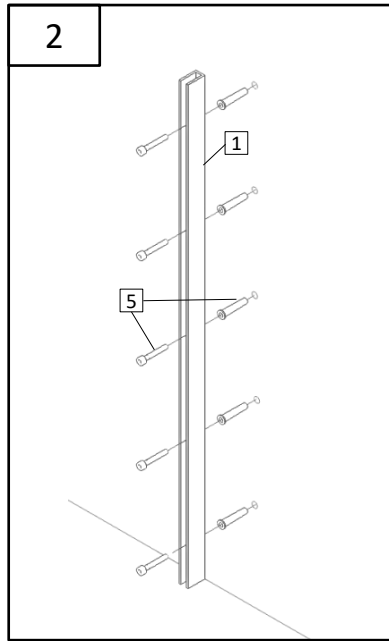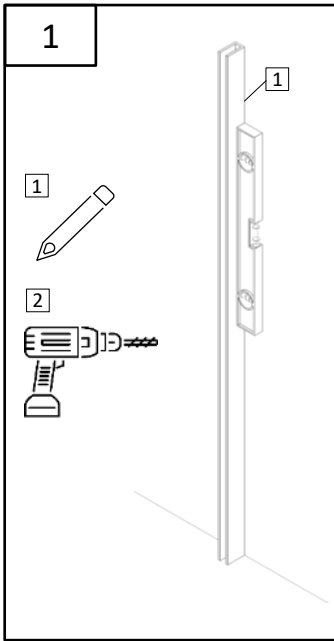

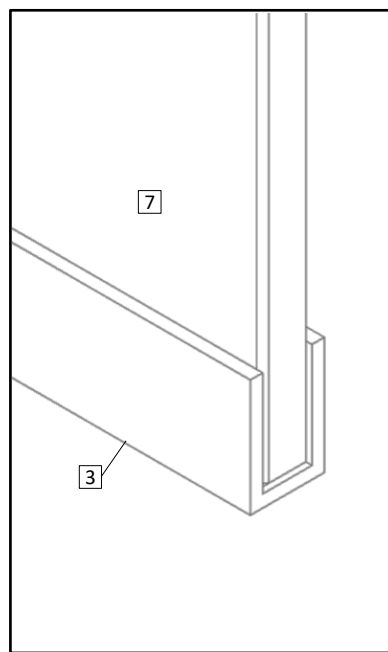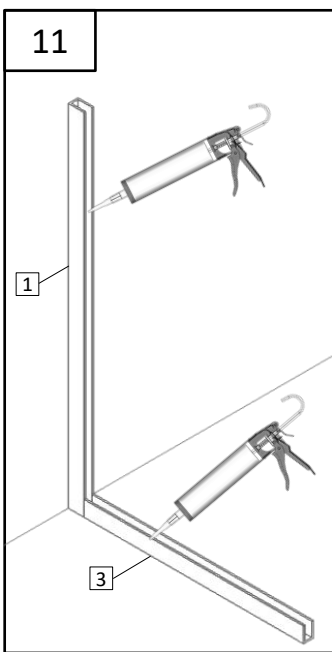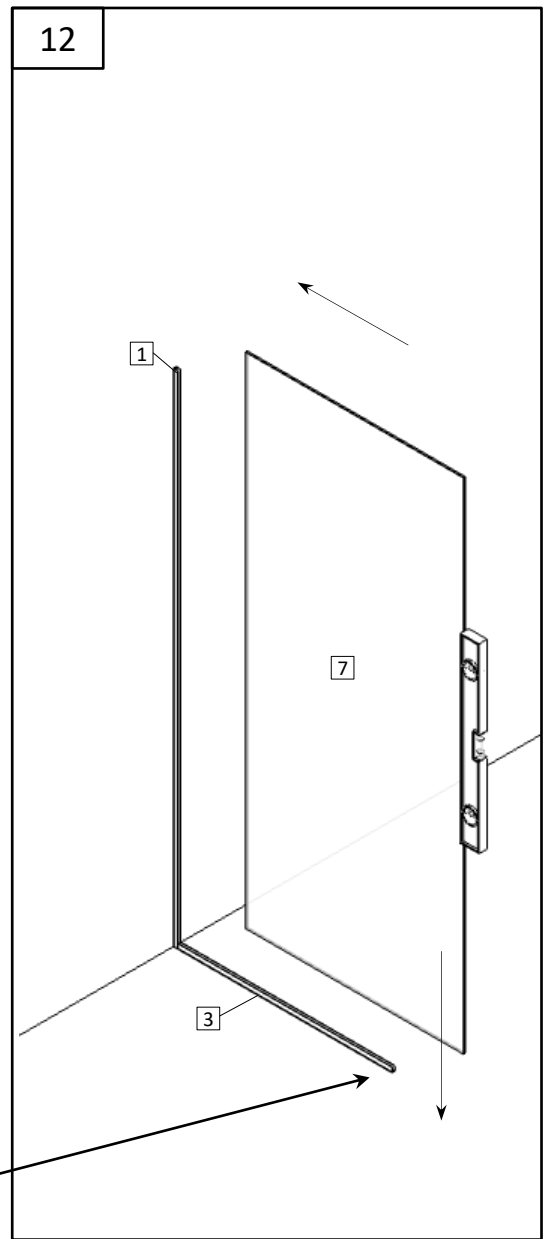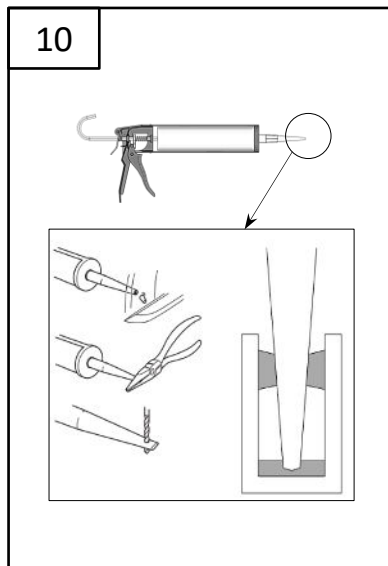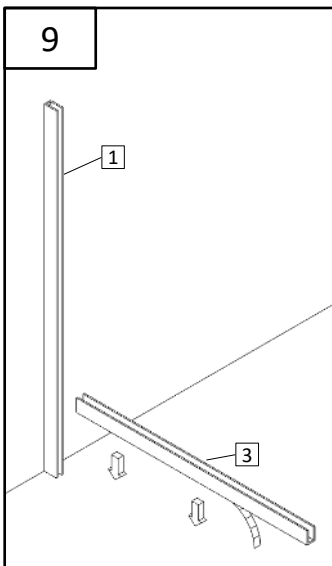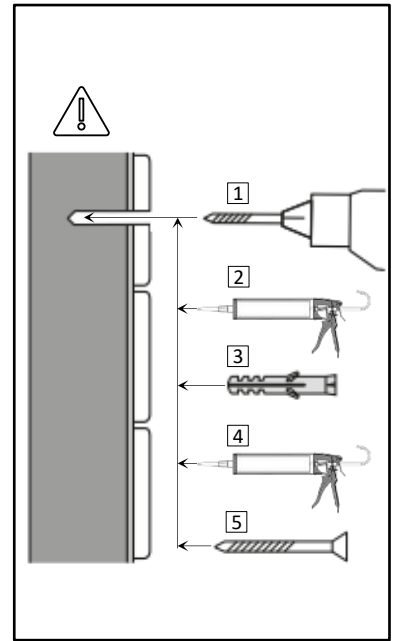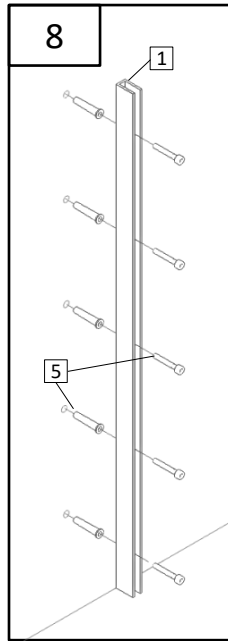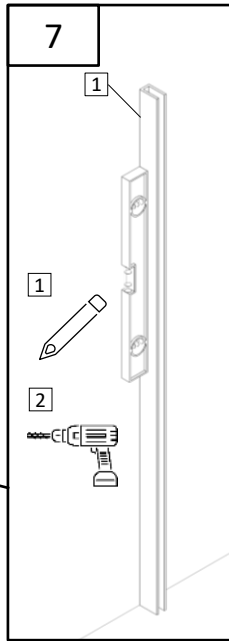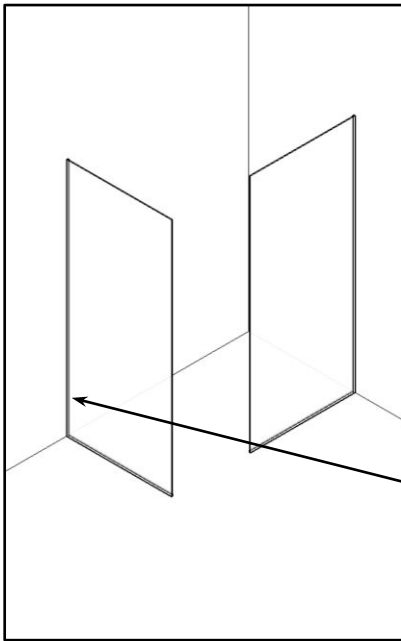

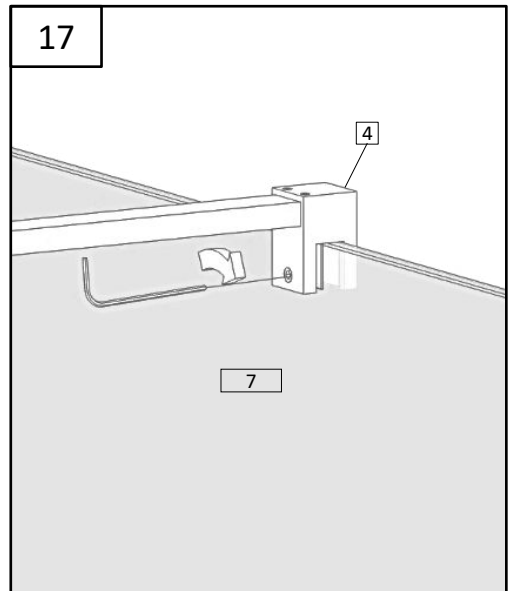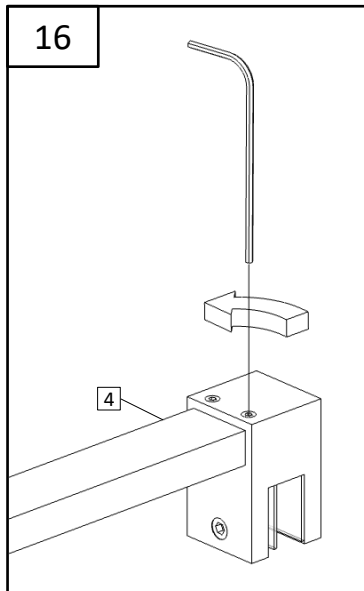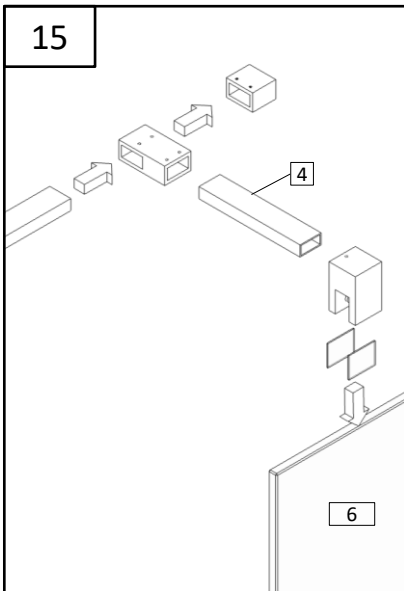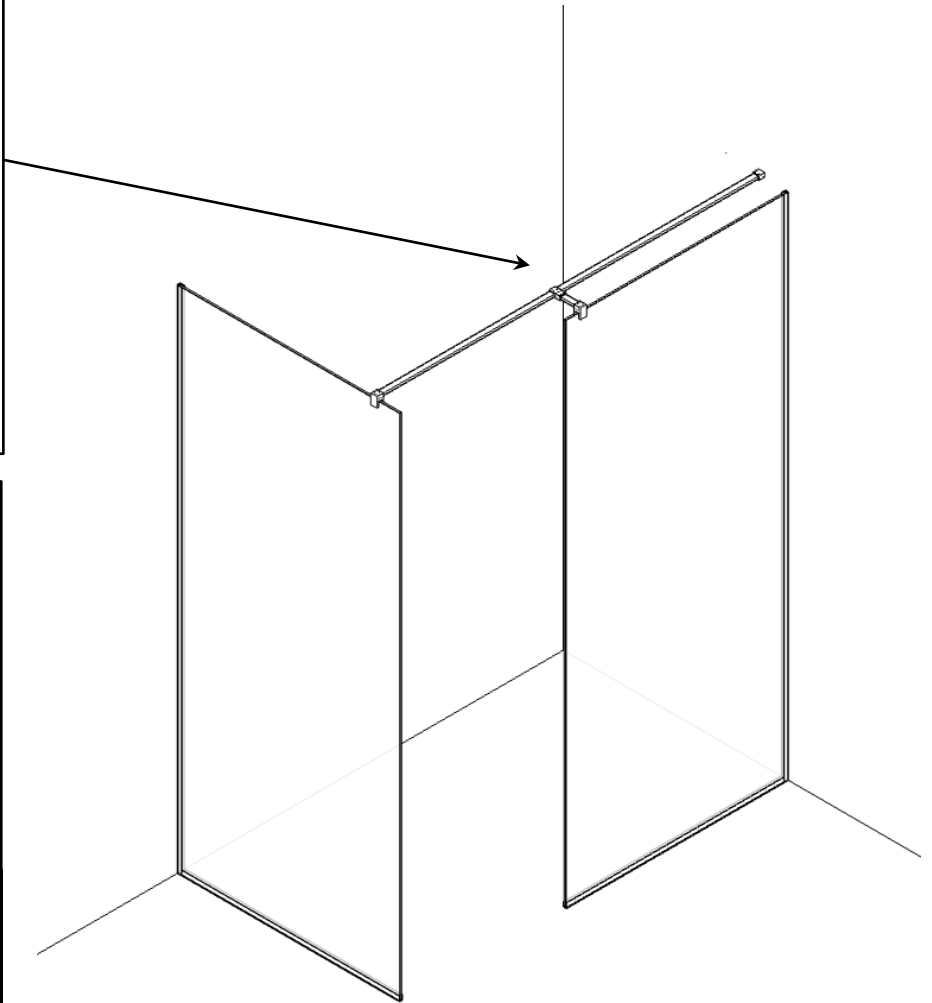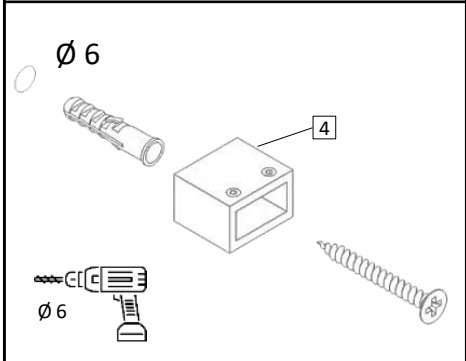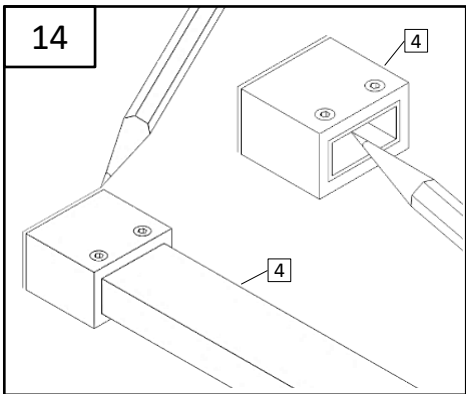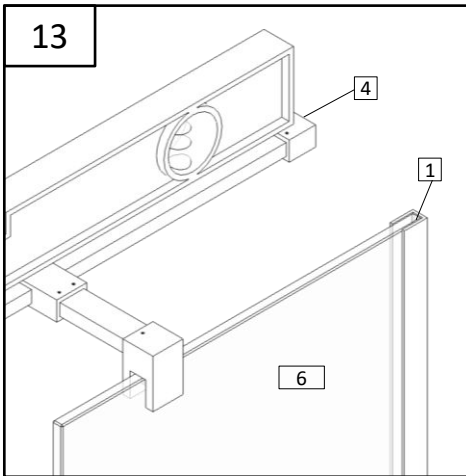

18



24 h

