






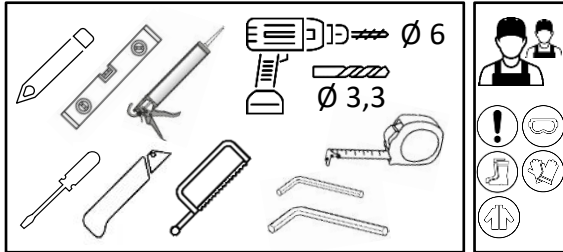




# STELLA BLACK



## Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions



1.		PT01SD-01	1
2.		PT01SD-TOP	1
3.		3,5x13 2K3SET	1
4.		ELE4	1
5.		8850KUO-6-2010	1
6.		PT01SD-02	1
7.		PT01SD-03	1
8.R		SC-SL-UZL180R	1
8.L		SC-SL-UZL180L	1
9.		PT01SD-04	1
10.		3,5x35 SK3SET; Ø 6	2
11.		PT01SD-05	1
12.		6 mm Safety Glass + VIRA20CH	1

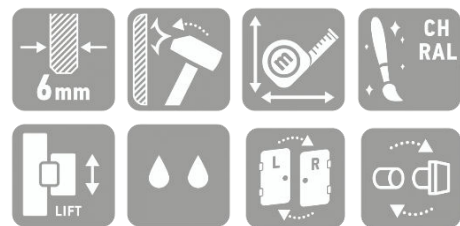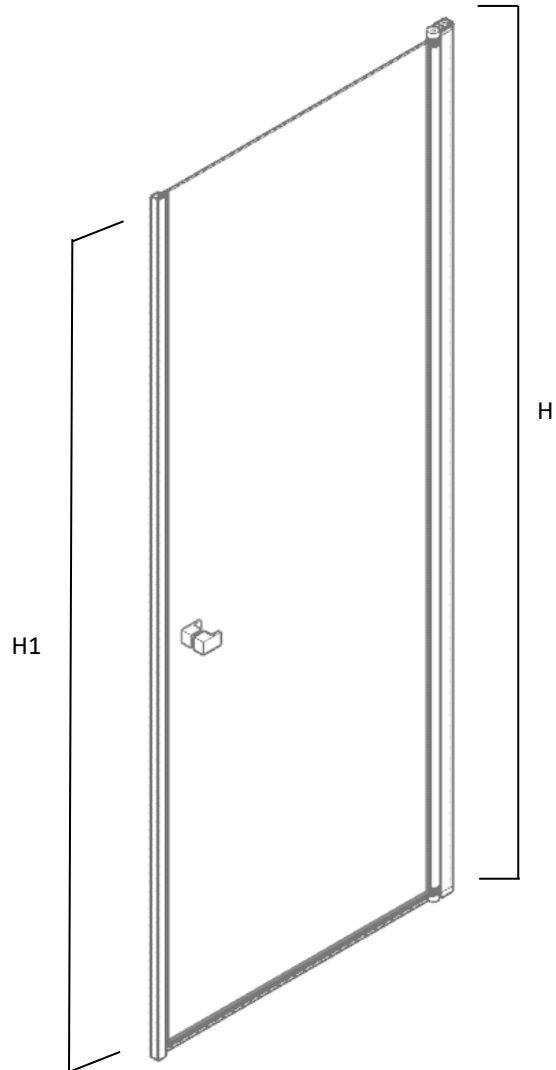


LEFT

RIGHT



STELLA BLACK	A (mm)	A1 (mm)	H (mm)	H1 (mm)
60STE_B	695-703	530	2000	1980
70STE_B	795-803	630	2000	1980
80STE_B	895-903	730	2000	1980
90STE_B	995-1003	830	2000	1980

# STELLA BLACK

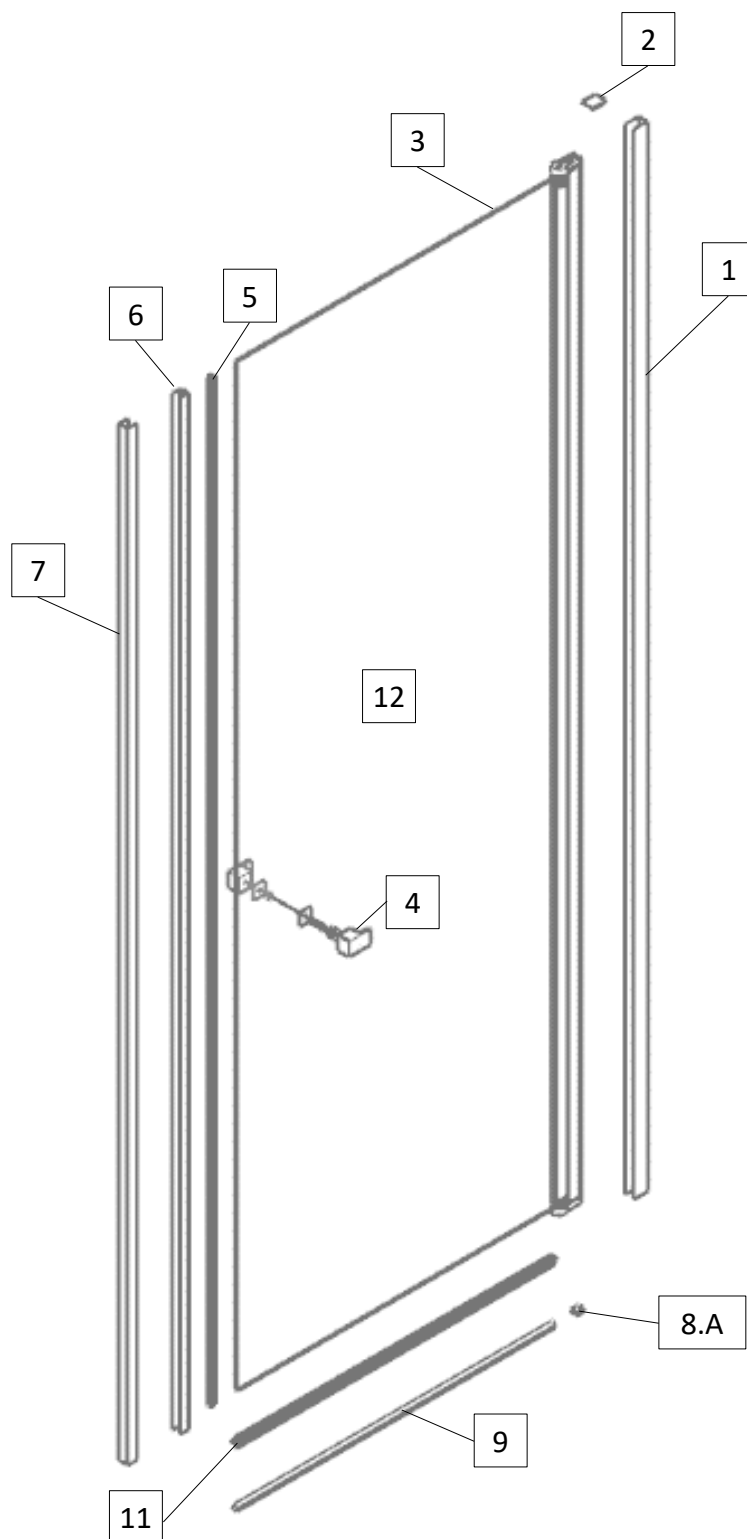

**Uzmanību!** Rūdīts stikls - rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

