


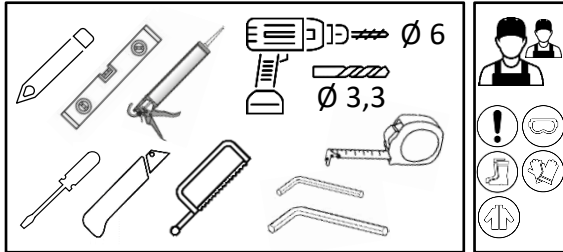







STELLA PLUS


Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions




1.		PT01SD-01	1
2.		PT01SD-TOP	1
3.		SUP_PT01SC	1
4.		3,5x13 2K3SET	1
5.		ELE4	1
6.		8850KUO-6-2010	1
7.		PT01SD-02	1
8.		PT01SD-03	1
9.R		SC-SL-UZL180R	1
9.L		SC-SL-UZL180L	1
10.		PT01SD-04	1
11.		3,5x35 SK3SET; Ø 6	2
12.		PT01SD-05	1
13.		6 mm Safety Glass + VIRA20CH	1
14.		6 mm Safety Glass + VIRA20CH	1

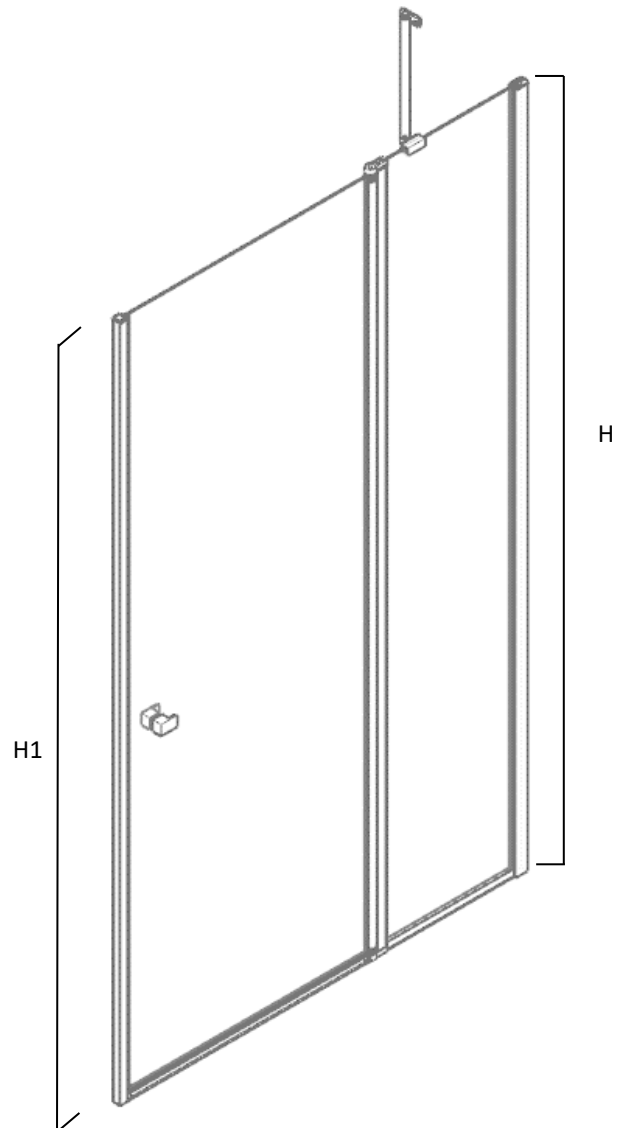



STELLA PLUS A+B (mm) B (mm) H (mm) H1 (mm)



70STE+	695-703	200	2000	1980
80STE+	795-803	200	2000	1980
90STE+	895-903	300	2000	1980
100STE+	995-1003	300	2000	1980
110STE+	1095-1103	400	2000	1980
120STE+	1198-1203	500	2000	1980

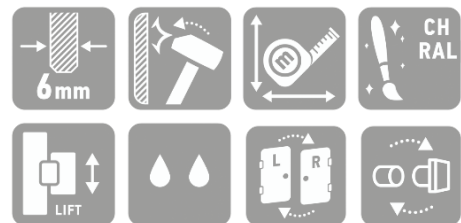

LEFT

RIGHT

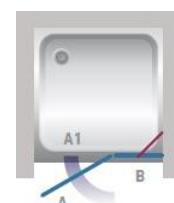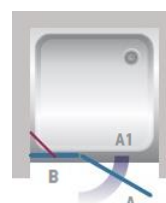

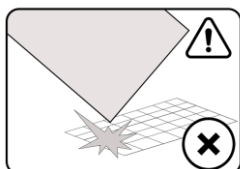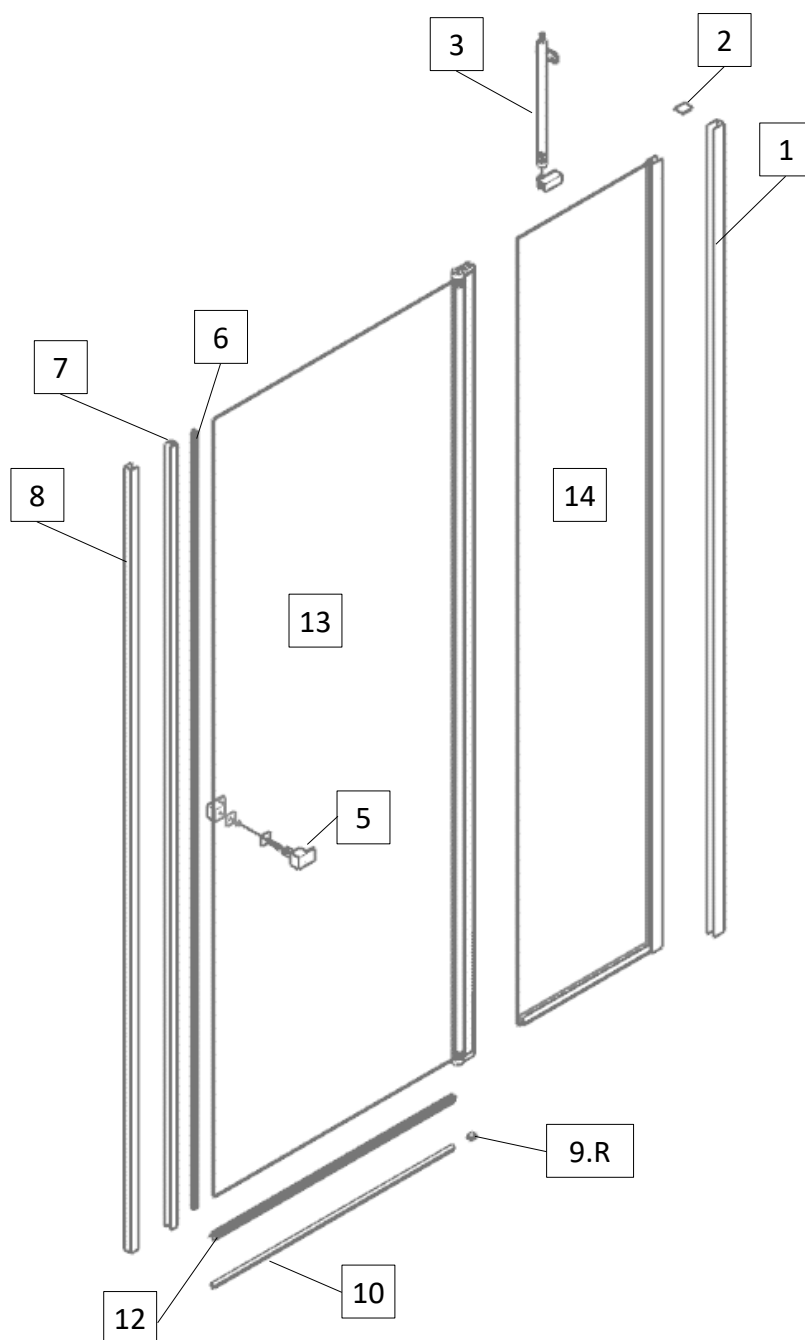

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

