



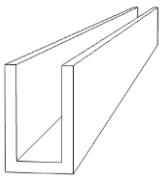

UNO


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions

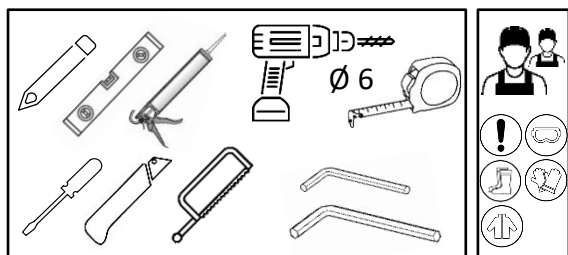



1.		DZT100CHR10X 20 + SK2SET 1	2
2.		PAL-01B	1
3.		8 mm Safety Glass	1

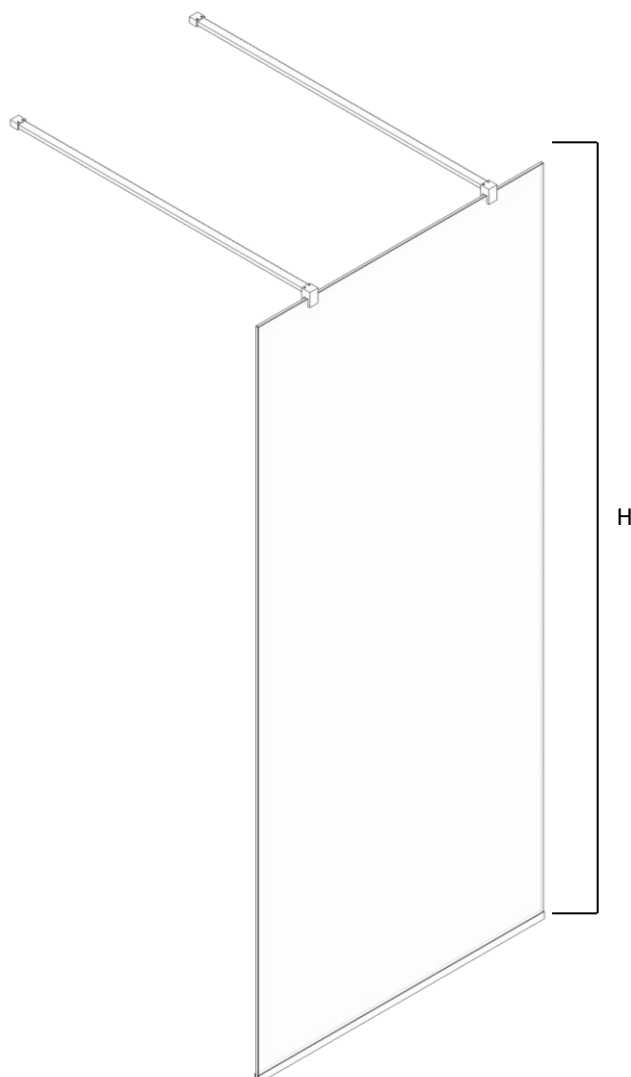

UNO	A (mm)	H (mm)
100UNO	965	1988
110UNO	1065	1988
120UNO	1165	1988
130UNO	1265	1988
140UNO	1365	1988
150UNO	1465	1988
160UNO	1565	1988







UNO






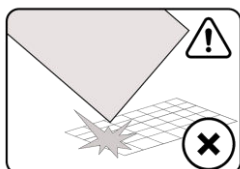
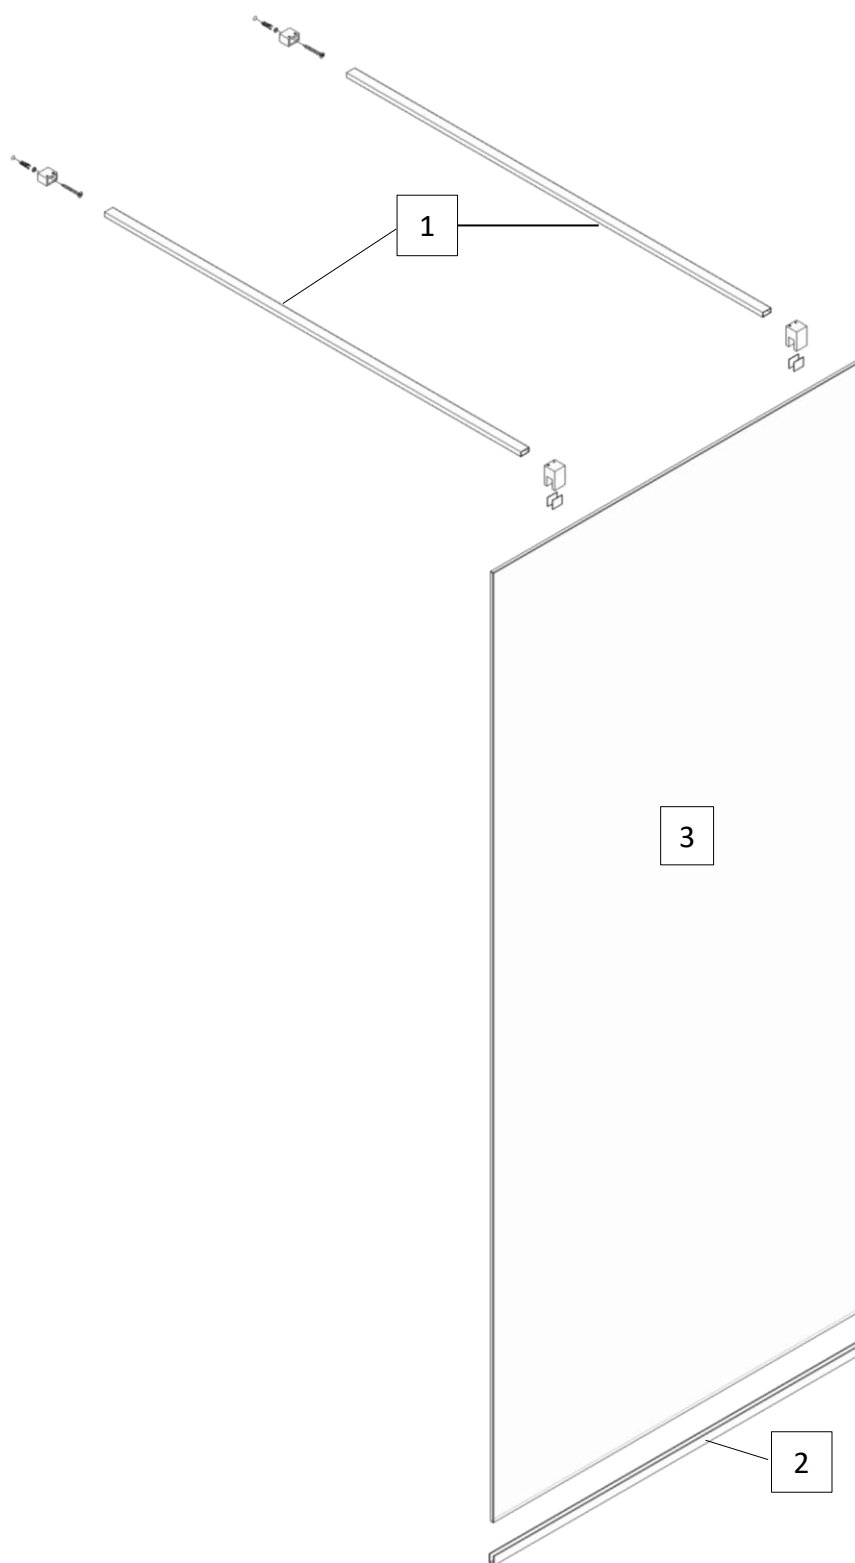


Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

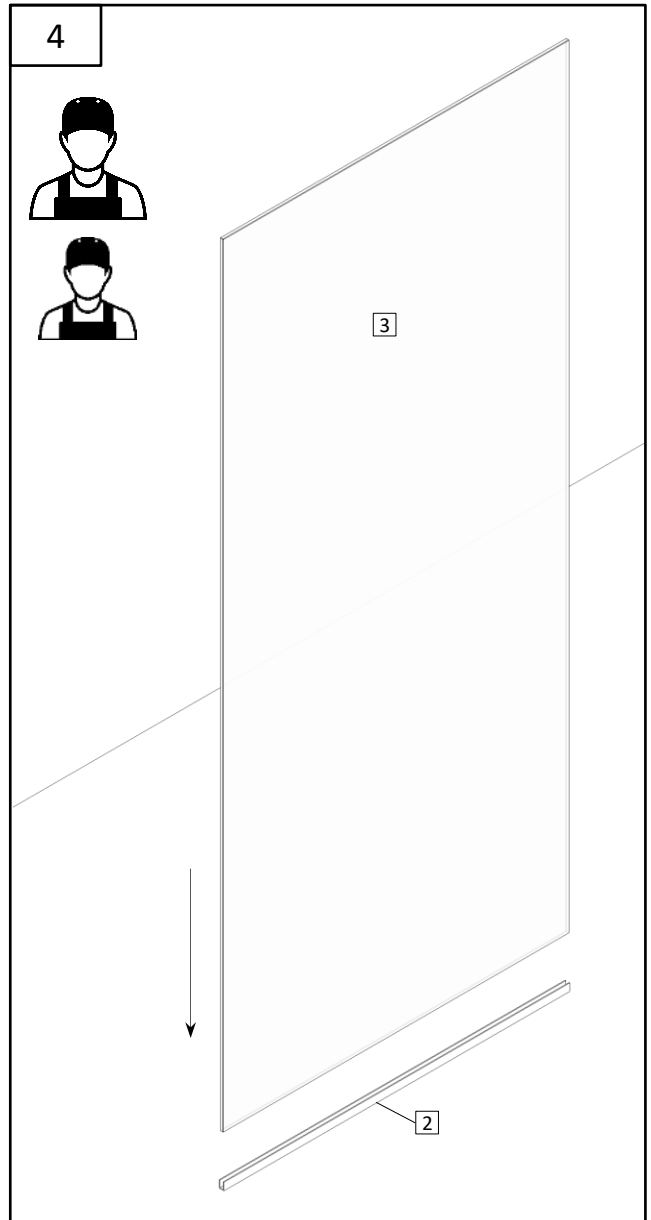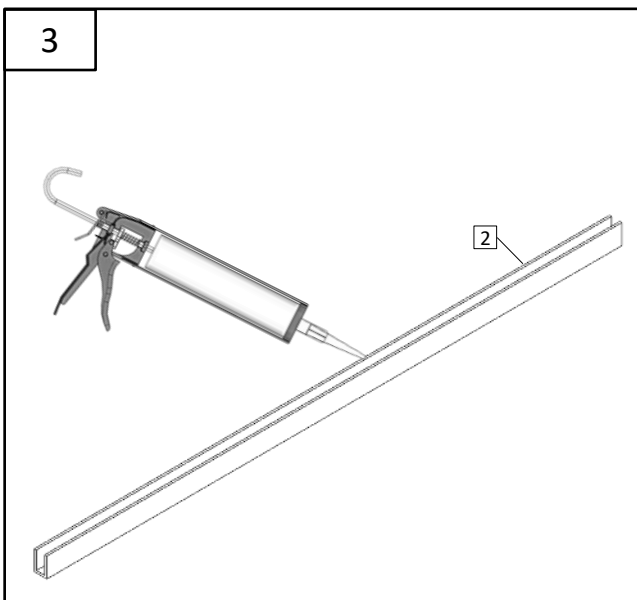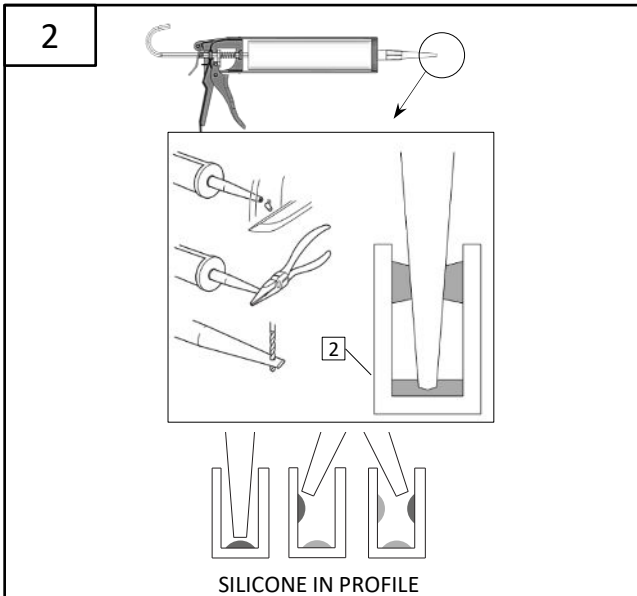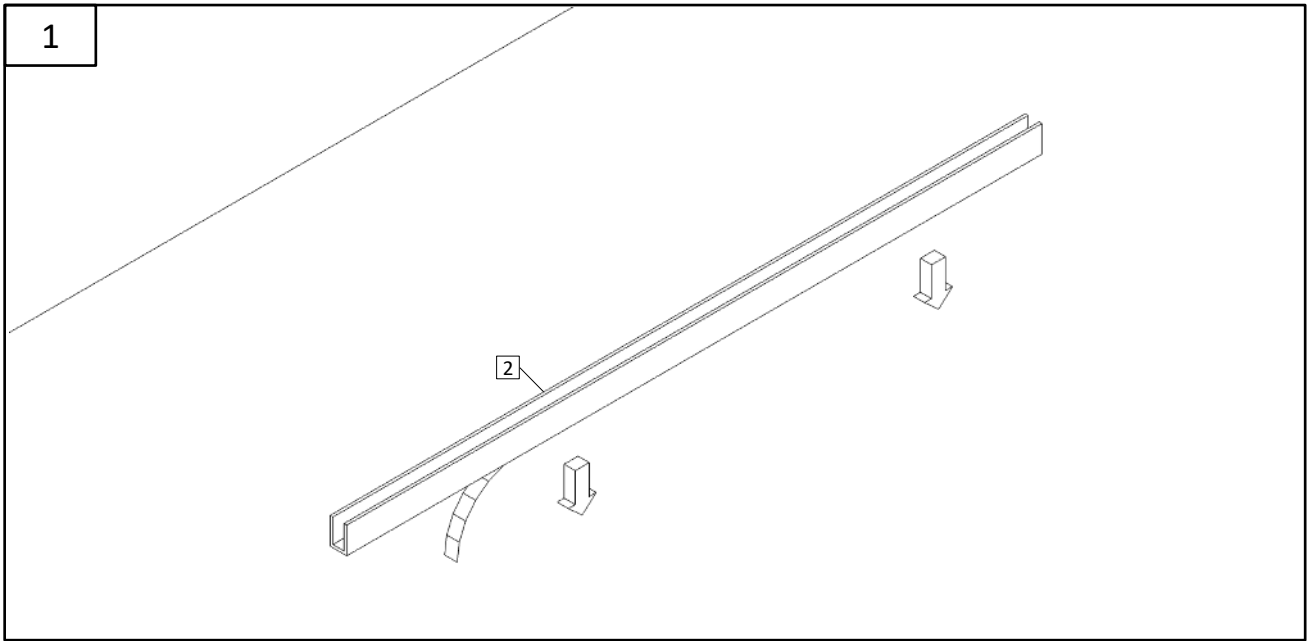

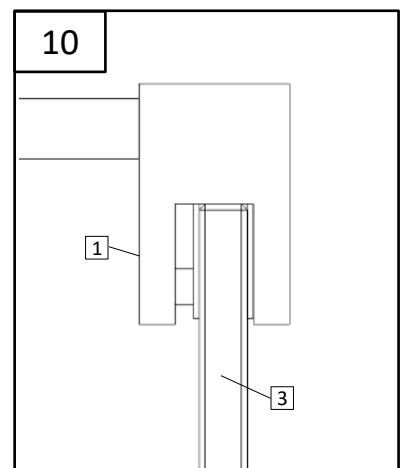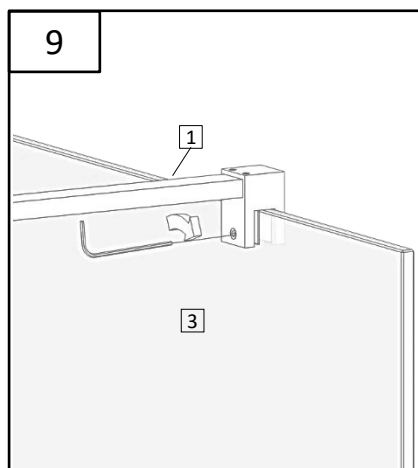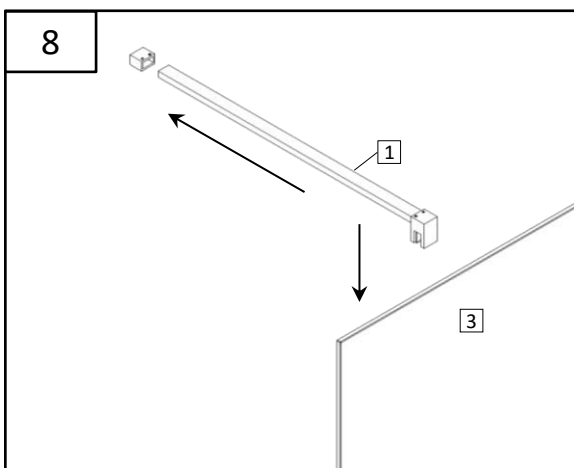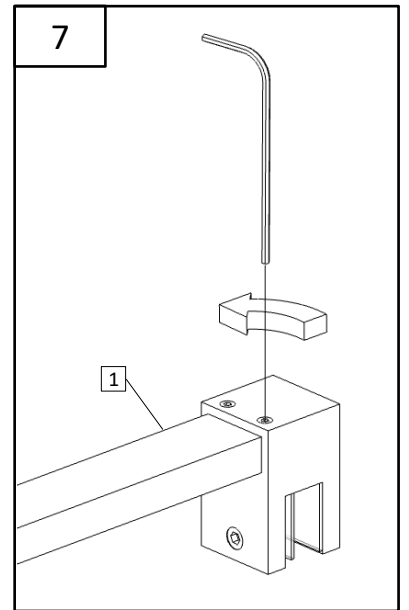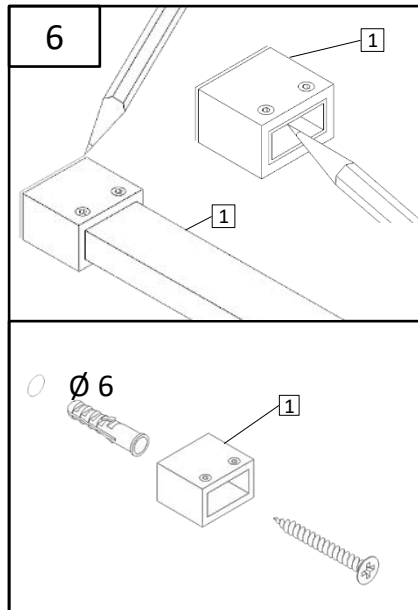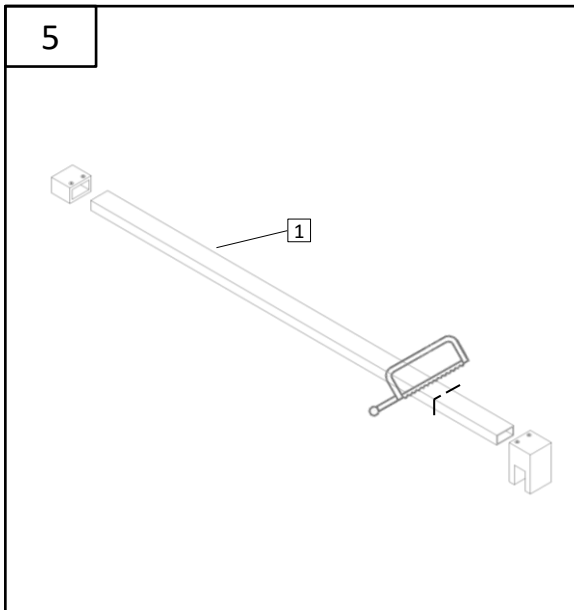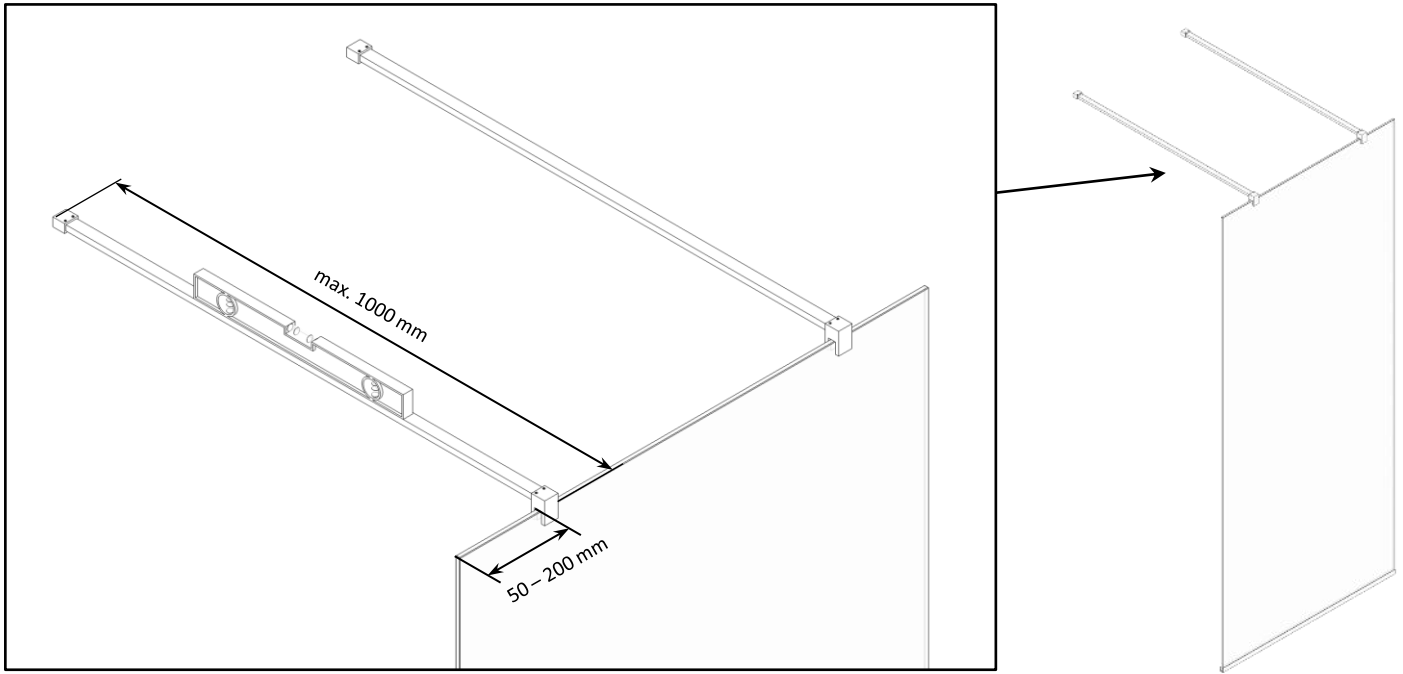

11



24 h

