


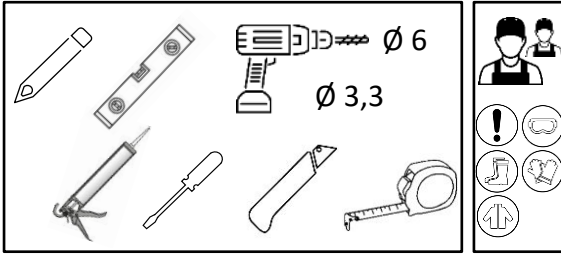














# ZETA


## Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены


Shower wall installation instructions





1.		R22-01	1
2.		R22-02	1
3.		R22-03	1
4.		R22-04	1
5.		R22-05	1
6.		R22-06	1
7.		R22-07	1
8.		R22-08	1
9.		R22-09	1
10.		R22-10	2
11.		R22-11	3
12.		R22-12	1
13.		LUX – CH - 2856G	1
14.		3,5X35 3K1SET	1
15.		6 mm Safety Glass	2
16.			

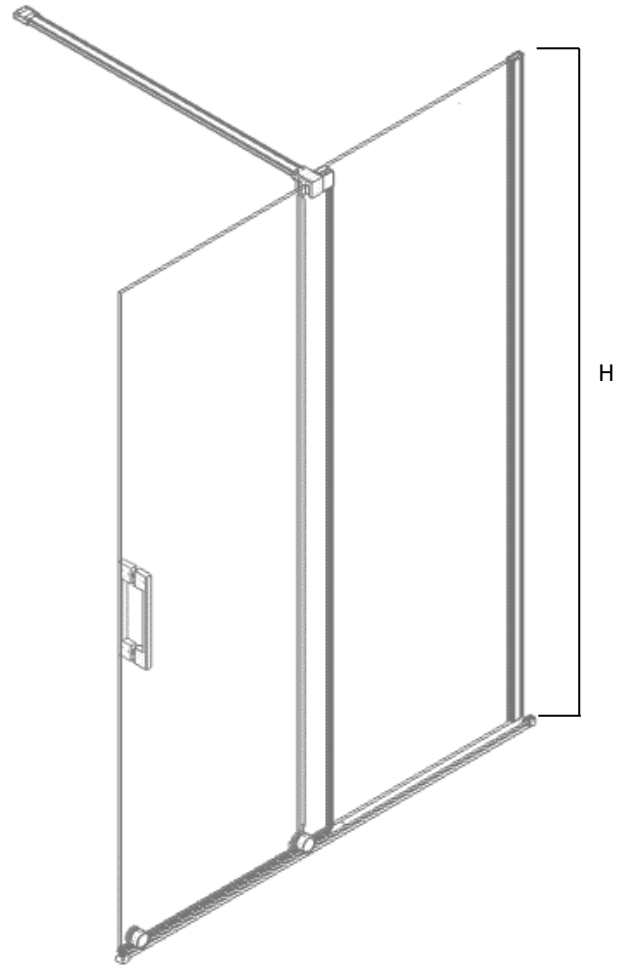

ZETA	A+B (mm)	H (mm)
80ZET	470-800	2000
90ZET	520-900	2000
100ZET	570-1000	2000
110ZET	620-1100	2000
120ZET	670-1200	2000
130ZET	720-1300	2000
140ZET	770-1400	2000
150ZET	820-1500	2000

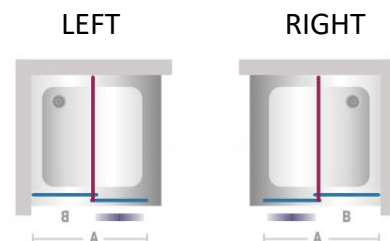

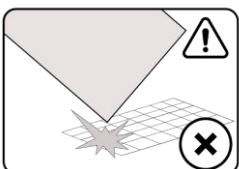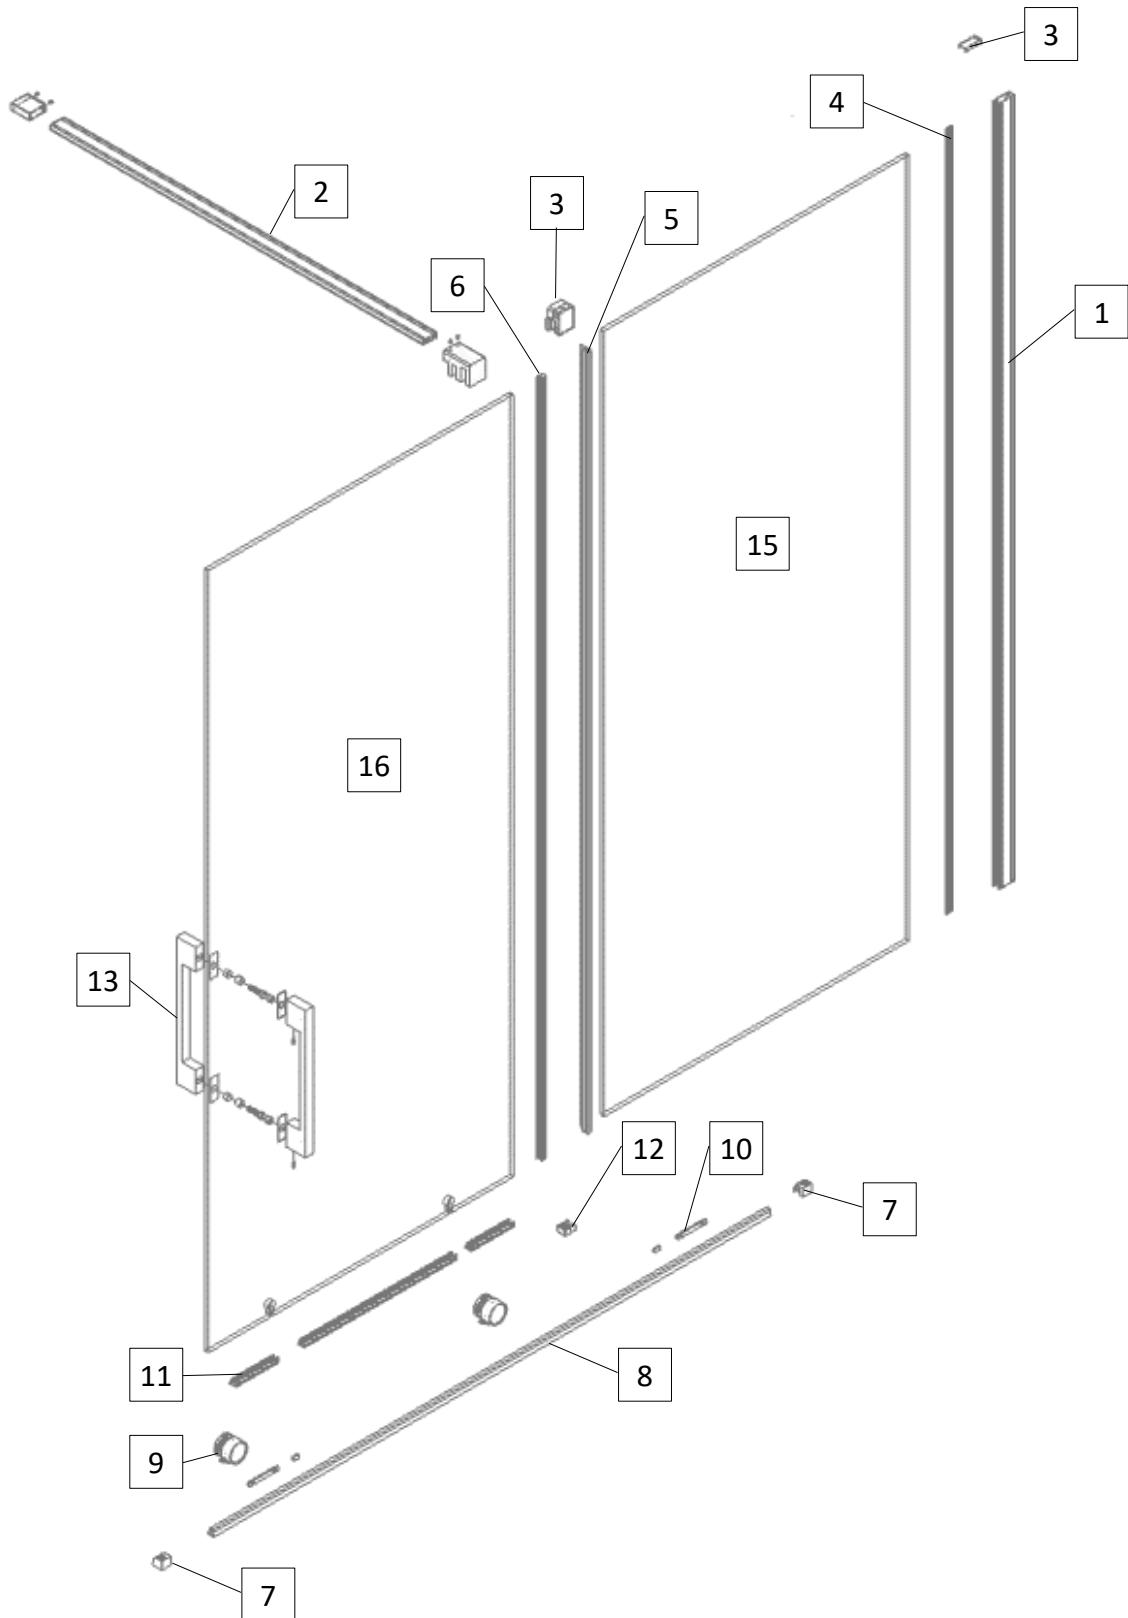

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

