










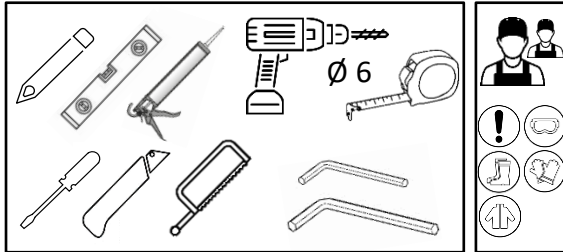


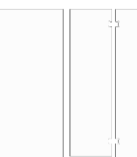
# DIANA LUX


## Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины

Shower enclosure installation assembly



1.		PAL-01	2
2.		PAL-01B	1
3.		PAL-01B_2	1
4.		S003-PROF	1
5.		S003_ROS_SET	1
6.		MF-29 5MAGN-6	1
7.		8850KUO-8-2010	1
8.		SF67-8-SERE	1
9.		8864-KUO-8	1
10.		LUX-CH-2856G	1
11.		SC-ALU8X9NEW	1
12.		3,5x35 SK1SET; Ø 6	2
13.		8 mm Safety Glass	1
14.		8 mm Safety Glass	1
15.		8 mm Safety Glass	1

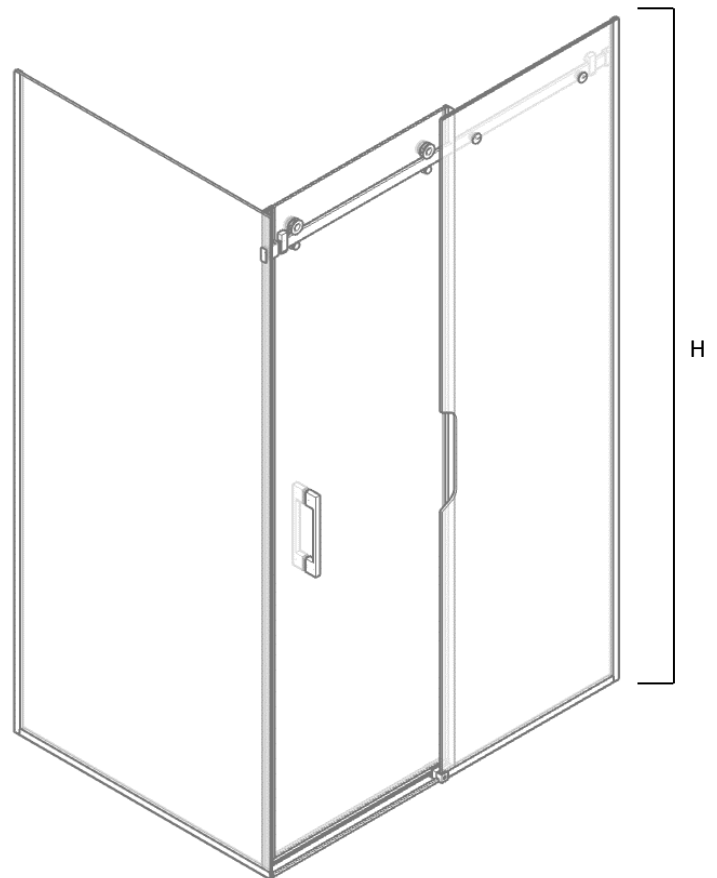




DIANA LUX	A (mm)	C (mm)	H (mm)
100x100DIA	980-1000	990-995	1988
110x110DIA	1080-1100	1090-1095	1988
120x120DIA	1180-1200	1190-1195	1988
130x130DIA	1280-1200	1290-1295	1988
120x80DIA	1180-1200	790-795	1988
120x90DIA	1180-1200	890-895	1988



LEFT

RIGHT

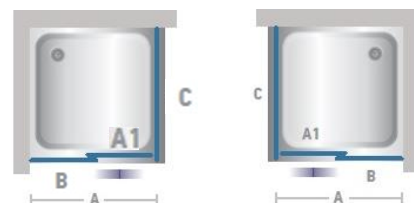

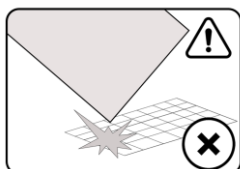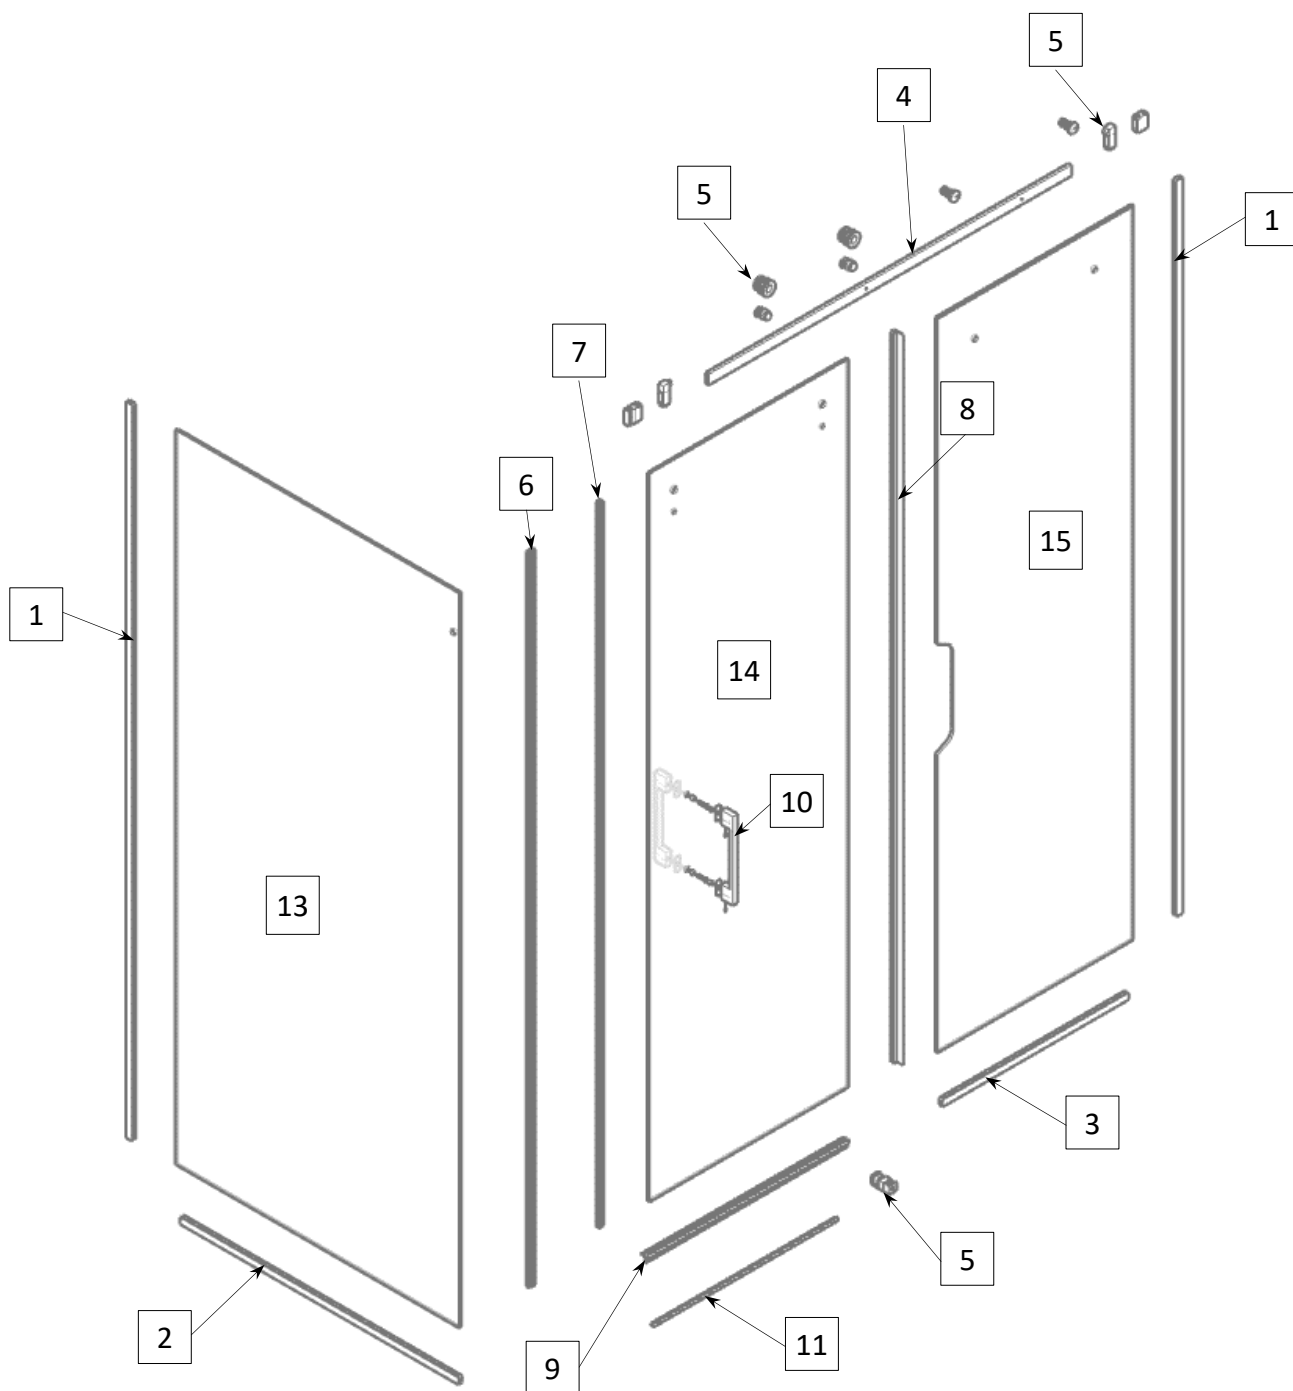





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

# 1.A

DIANA LUX	P, mm	A+B1	C1, mm
100x100DIA	1000 x 1000	990	990
110x110DIA	1100x1100	1090	1090
120x120DIA	1200 x 1200	1190	1190
130x130DIA	1300 x 1300	1290	1290
120x80DIA	1200 x 800	1190	790
120x90DIA	1200 x 900	1190	890

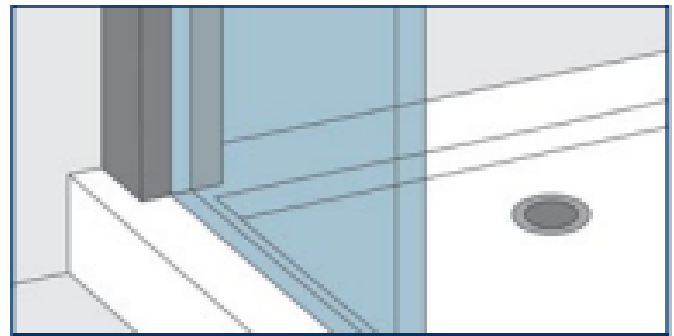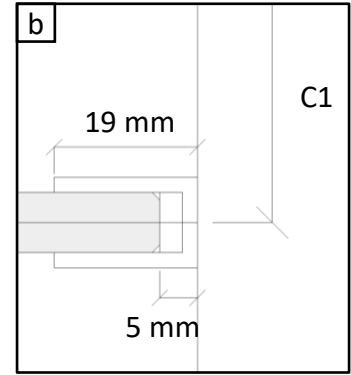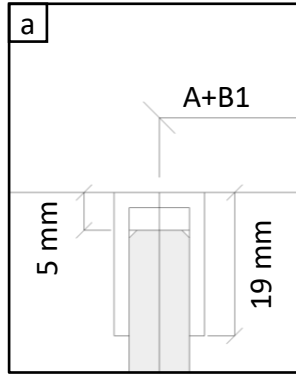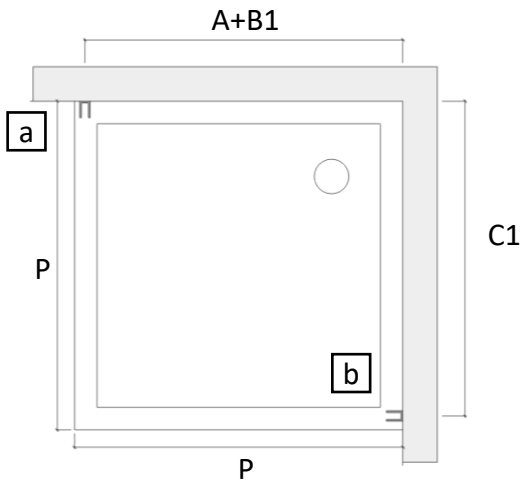

# 1.B

DIANA LUX	D	S
100x100DIA	1000	1000
110x110DIA	1100	1100
120x120DIA	1200	1200
130x130DIA	1300	1300
120x80DIA	1200	800
120x90DIA	1200	900

