


# LUCIA


## Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions

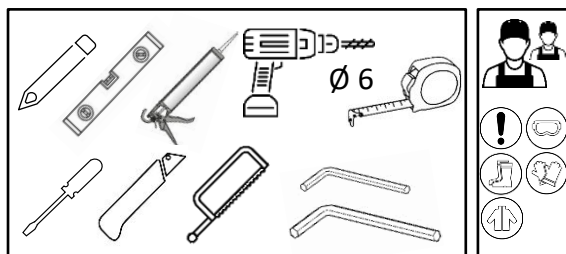

1.		QW01	2
2.		QW02	2
3.		QW03	2
4.		QWSET-04	1
5.		QWSET-05	1
6.		QW06	1
7.		QW07	2
8.		QW08	1
9.		QW09	2
10.		3,5x35 SK1SET; Ø 6	1
11.		8 mm Safety Glass	1
12.		8 mm Safety Glass	1

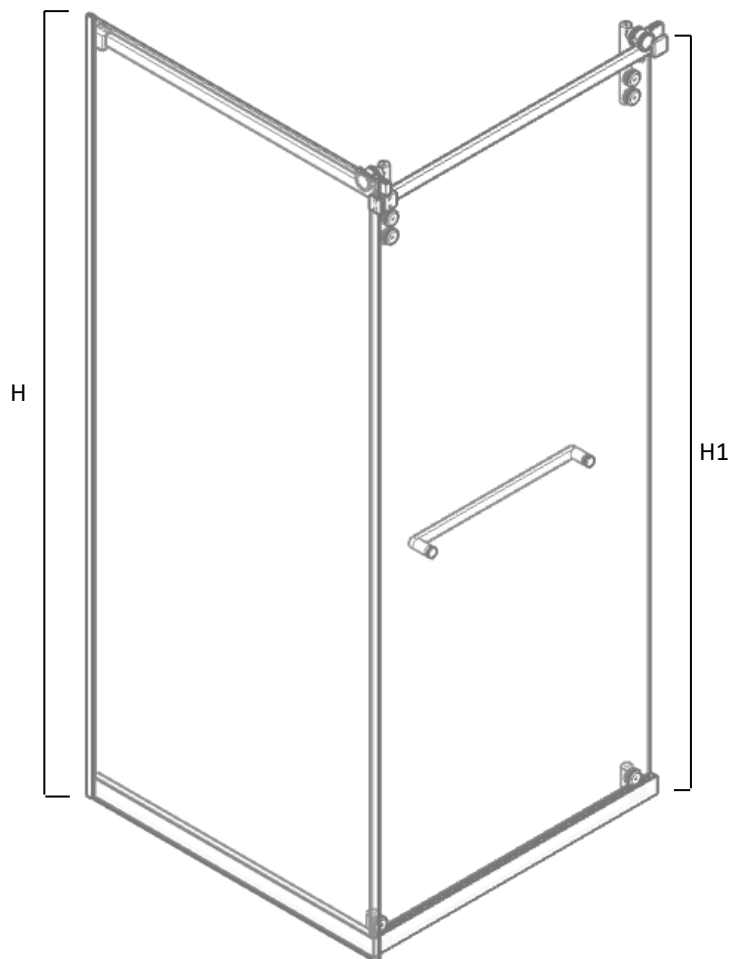




LUCIA	A (mm)	A1 (mm)	B (mm)	H (mm)	H1 (mm)
70X70LUC	692-695	650	687-692	1997	1891
80X80LUC	792-795	750	787-792	1997	1891
90X90LUC	892-895	850	887-892	1997	1891
100X100LUC	992-995	950	987-992	1997	1891



LEFT

RIGHT

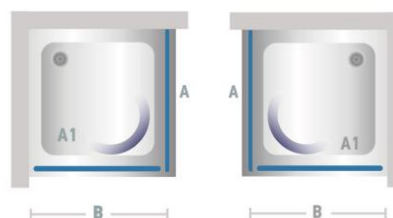

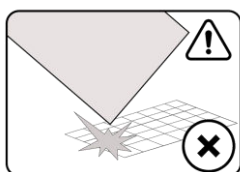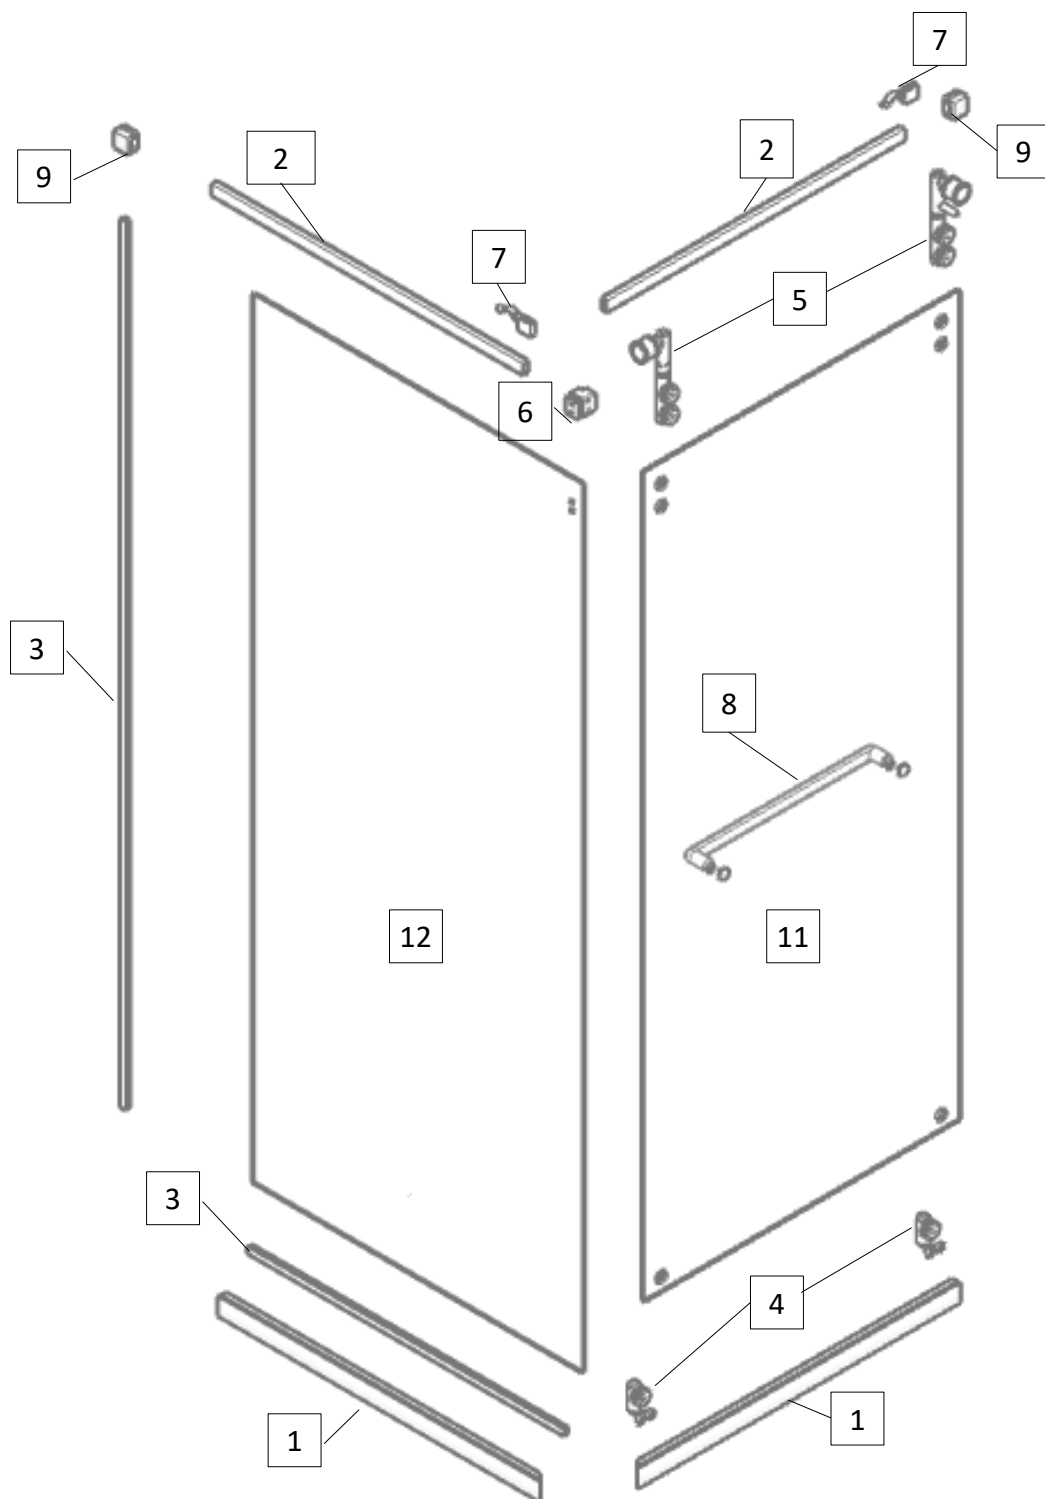

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.